


Osaki

INSTRUCTION MANUAL
INSTRUCTION MANUAL
INSTRUCTION MANUAL

OS-7075R

Touch Heart Chair

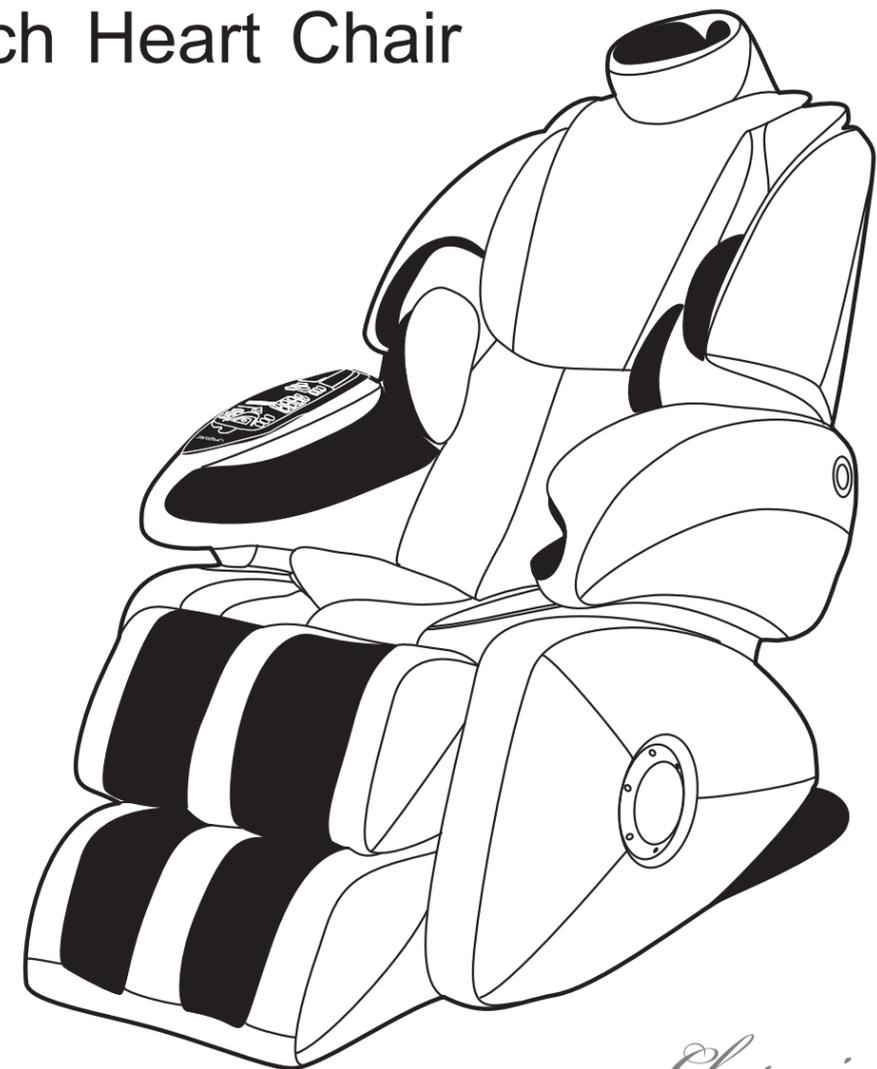

Charming Health

TABLE OF CONTENTS

Before Use

Safety Cautions	1
Product Features	2
Product Structures	2-3

Operating Instructions

Operating Instructions of Massage Chair (Automatic operation)	3
Operating Instructions of Remote Control	4-7
Notices After Using	8-9

Installations

Installation for Footrest	10-11
Installation for Side Panel	12
Installation for Armrest	13
Installation for Seat Cushion	14
Installation for Back Cushion and Head Cushion	14
Preparations before Use	15

Maintenance and Repair

Maintenance	16
Maintenance and Storage	16
Troubleshooting	17
Specifications	17

Safety Cautions

- Before using the equipment, please read the "Safety Cautions" thoroughly for correct use.
- The following precautions help you safely and correctly use the equipment, and avoiding possible damage to property or injury to persons using chair and others.
- The precaution items are categorized into "Warning" items and "Caution" items according to the degree of danger if they are not abided by.
- After reading, please keep this manual in a place that is easily accessible for future reading.
- This chair is not intended for use by person (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the chair by a person responsible for their safety. Children should be supervised to ensure that they do not play with the chair.
- When using this chair, it is suggested to string along with family member or friends.

⚠ Warning

When using the backrest adjusting function	Please make sure if there is any person (especially an infant or a child), pet, or obstacle such as furniture behind the chair. Avoid any accident of people injury, furniture or chair damages.
Do not use power supply with incorrect voltage	The use of incorrect voltage may cause accident such as electric shock or fire.
When there is failure of massage chair	Please pull out the power plug from the socket immediately and call the dealer for inquiry.
When there is power outage	Please turn off the power switch and pull out the power plug.
When not in use	Please turn off the power switch and pull out the power plug from the socket.
When the power cable or plug is damaged	To avoid any danger, they should be replaced by professional technicians from the manufacturer or its service agency or by other qualified personnel.
The chair should be placed in a flat floor.	Placing the equipment in an unsteady place may cause noise, which brings you uncomfortable feeling.
Do not sit on the armrest or the backrest	Otherwise, the equipment may be turned over, causing injury and damage of the equipment.
When the surface materials is found be torn	Please stop using the equipment and notify the dealer of the same immediately, otherwise an accident may occur.

⚠ In case of the followings, please use the equipment following doctor's advice.

● Patients currently receiving medical treatment, especially those feeling unwell in body.
● Patients with abnormal backbone (such as bending backbones).
● Patients with malignant tumor.
● Patients with any acute diseases.
● People with osteoporosis.
● Women in pregnancy or during menstruation.
● Aged people.
● People with heart diseases (patients with angina or myocardial infarction or equipped with heart pacemakers).
● Patients with high fever.
● People with weak body.
● People with sensation disabilities.

⚠ Caution

This chair must be grounded.	May result in damages to the chair or electric shock.
No adaptor or transformer device should be used with this chair.	May result in leather aging and discoloration may be caused, or a fire accident caused.
Do not use gasoline or thinner to clean the equipment.	May result in leather aging and discoloration may be caused, or a fire accident caused.
Do not sit on the armrest or backrest.	May result in injury or equipment damages.
Do not move the chair by rolling the casters on wooden floor or carpet.	May result in floor damages .
Do not use the chair immediately after meal.	You may feel indisposed.
Do not move the chair when someone is sitting on it.	May result in injury or equipment damages.
Do not allow two or more people sitting on the chair at the same time.	May result in injury or equipment damages.
Do not use the equipment without wearing any clothes.	The skin is directly rubbed by surface of the chair, causing skin pain.
Do not wear any ornament on head when using the equipment.	May result in injury.
Do not bump the armrest with hard or sharp things.	The appearance may be damaged.
Do not operate under blanket or pillow.	Excessive heating can occur and cause fire, electric shock or injury to persons.
Do not spill water or liquids on the chair.	May result in electric shock, short circuit or combustion.
Do not use outdoors.	May result in equipment damages.

Troubleshooting


Problems	How to Check	How to Solve
Noise during operation	These are the normal sound of motor. No need to check.	No need to do anything.
The noise is getting louder during massage	Check whether the appliance has been operating continuously for over 4hours.	Switch off the appliance and allow at least an hour rest.
The appliance surface is hot	Check whether the appliance has been operating continuously for over 4hours.	Switch off the appliance and allow at least an hour rest.
The appliance sometime pauses	Check whether the power plug on the socket is loose.	Try the unit again or check the power supply.
The massage roller are stayed at the waist when startup the power.	The ON/OFF button is not pressed after the unit is powered on.	Press the ON/OFF button and then select any of the function buttons.
	The timer function has shut off the massage function.	Press the ON/OFF button or select any of the function buttons.
	The chair has just been powered on and the massage roller is not in the highest position.	Please press any of the auto function buttons, and then the massage roller will reach shoulder automatically.
	The power cord is not connected.	Connect the power plug and switch on the unit.

When the appliance is not functioning properly from the remote control, you should switch it off for a while and switch on again. If the problem persists after trying the solutions given in this guide, please contact the local sales dept.

⚠ Caution

- During operation, the following noises are a normal part of the chair's operation and do not affect its performance in any way.
 - Noises during tapping
 - Sound of the rollers rubbing against the seat cover during kneading.
 - Sound of raising and lowering the roller.
 - Sound of the air massage cushion.
 - Sound of air pump, air discharge.
 - Sound of raising and lowering the reclining seat back and footrest.

Specifications

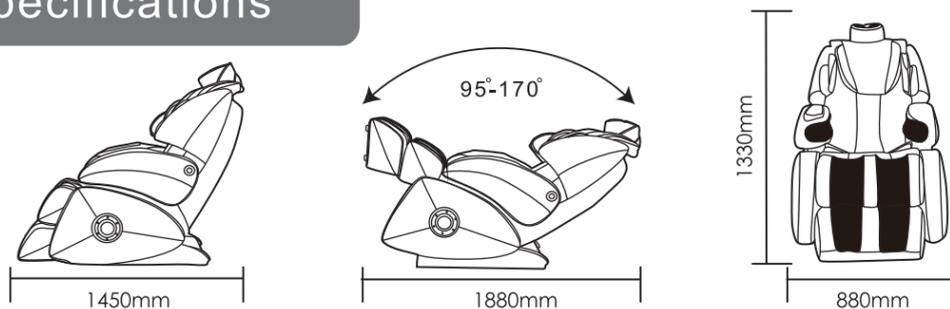

Model	OS-7075R
Function	6 auto functions, shoulder massage, head massage, sync movement armrests, lengthened hand massage, lengthened massage tracking, full body air massage, zero gravity stretch.
Tracking	800mm
Reclining angle	95-170° stepless adjustment
Power supply	AC □ 220V~50Hz □ 120V~ 60Hz
Consumption	200W
Timer setting	15-minute automatic timed shutdown
Safety device	Devices that have protection of overheating, over-current, over-voltage, protection against abnormal program, foot rest anti-jam prevention and function of auto switch-off.
NW/GW	130kg/159kg
Dimensions	1520×1050×740(mm)
Outer Covering	PU massage chair leather
Supplied items	Power cord, installation parts, buffer pad


Standards applied:GB-4706.10-2008


*The specifications are subject to changes without further notice.

Product Features

- **Patented design of armrest**
It integrates the streamline shape and the comfortable.
- **Patented safety design of footrest**
The lifting of footrest is not restricted by the movement of motor extension, and it can be automatically adjusted as per the heights of people.
- **3-D feeling of whole-body air massage**
Adopting advanced patented air system, which provides ample air pressure and continuous airflow to make you enjoy perfect massage.
- **Zero Gravity design**
Based on the principle of zero gravity massage, which enables the back, hip and legs recline simultaneously to fully relax the legs&back and release whole body stress with the body weight absorbed by hip, thus bring you to enjoy the massage feeling of zero gravity.
- **Safe motor equipment**
European safety design motor with a low voltage of 24V, adopted to reduce noise and create a comfortable massage.
- **Six super powerful auto programs allowing perfect massage**
Six convenient and automatic massage programs are specially designed to enable you to enjoy the massage like conducted by professional massage therapist.
- **Various massage techniques**
The chair provides various techniques including Shiatsu, massaging, kneading, tapping, air pressure and etc. and it can carry out different massages by combining these basic techniques.
- **Slide-to-store remote control**
Perfect designed of the slide-to-store remote control makes the operations more convenient.
- **The second generation auto back detection**
Infrared location can precisely detect your body shape and automatically scan your spine length to achieve an optimum massage position.

Product Structures

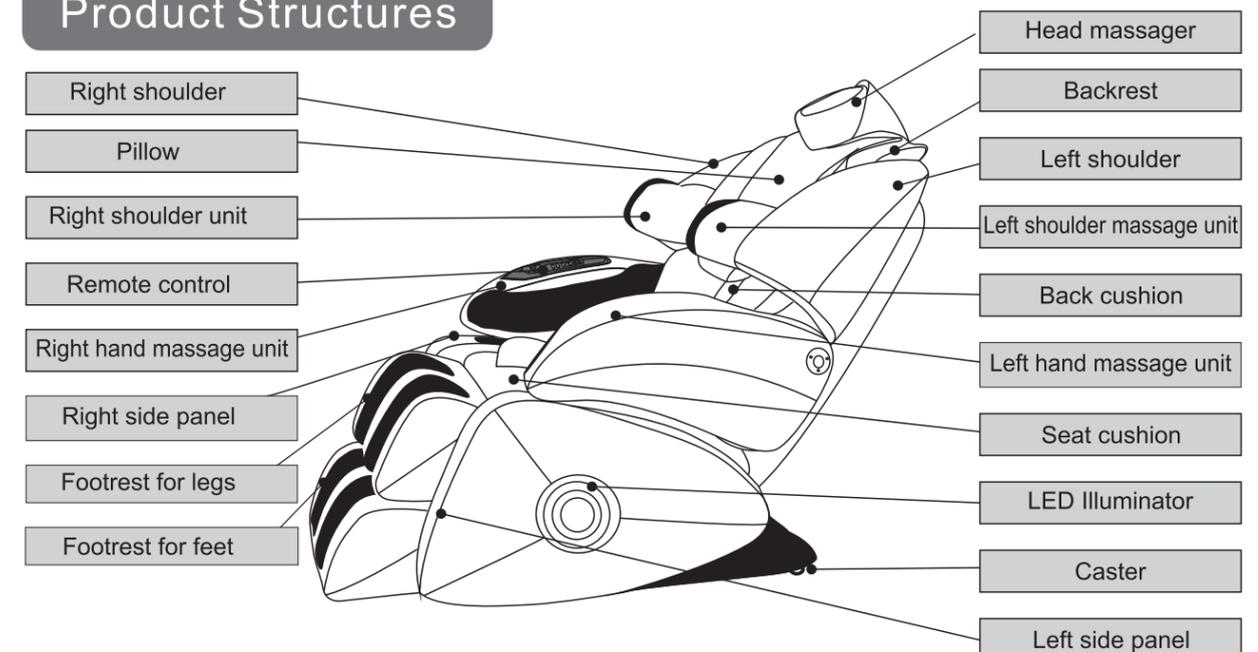

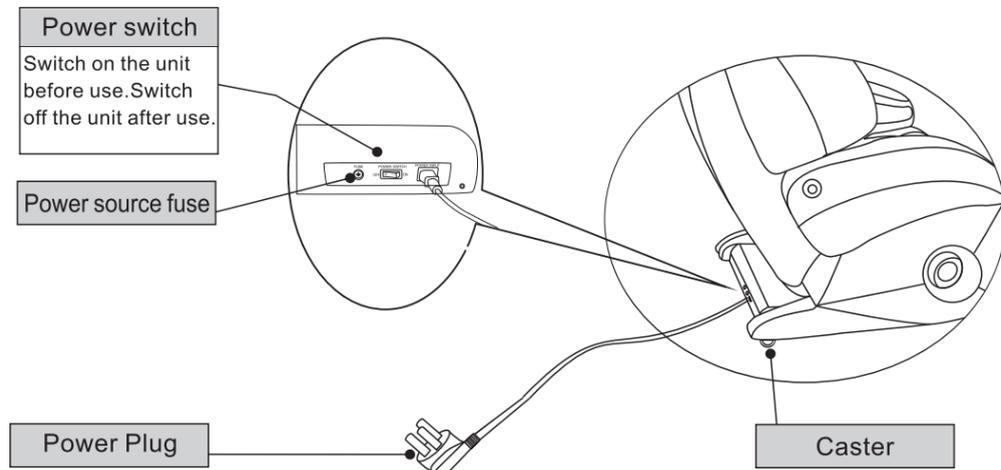

ⓘ Caution


- Before plugging the power cord into the wall outlet, make sure that the main Power switch is set to OFF.
- The Power plug must be plugged properly to an outlet, otherwise, it may result in electric shock or combustion.
- Do not use the same power outlet with other electric appliances.
- Do not use with any type of transformer device.

Operating Instructions of Massage Chair (Automatic Operation)

1. Connect the power plug to a wall socket.


2 Turn on the power switch. (as per picture)
(The power switch is behind the backrest.)

Turn on the power switch, the LED illuminators will light up and the power button of remote control will turn red.

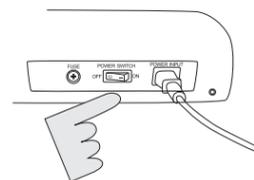

3. Turns the remote control "ON/OFF" key (as per picture)

After pressing the "ON/OFF" key, it turns blue, the seat will vibrate, and auto adjust the best position, then scan your body and enter the zero gravity program.
※You can press any other auto massage program to change the mode at any time.
Press "ON/OFF" key again, it turns red and turns off the appliance.

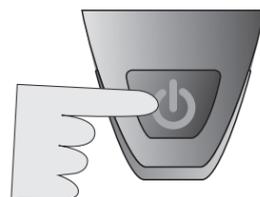

Maintenance

⚠ Warning

For maintenance or cleaning, please turn off the power switch first, then unplug the power plug from the socket.

Methods and Steps for the maintenance of the massage chair

Methods:

Please use soft dry cloth to wipe the surface of the equipment (do not use benzoline, alcohol or dilutor and let them drop onto the chair surface). Otherwise, the chair surface may be deformed and leather may deteriorate. Soak a piece of soft cloth in warm water and cleanser. Use the cloth to flap the chair surface. Lastly, use dry cloth to lightly wipe the surface. Let the surface dry naturally. (Do not use rapid drying method to dry the surface.)

Steps: Please follow the above method to wipe the following positions.


1. Pillow 2. Back cushion 3. Leather cover of backrest 4. Leather cover of seat cushion 5. Leather cover of footrest 6. Hand parts 7. Side Panel

Cleaning of armrest and back cover

1. Soak soft cloth in diluted neutral cleanser, and then wring out the cloth.
2. Use the wrung cloth to wipe off the dirt on the equipment.
3. Use clean dry cloth to wipe the equipment.

ⓘ Caution

- Keep the pets away from the chair, their hair may get into the chair and result in mechanical failure.
- Never use wet cloth to clean the chair. May result in mechanical failure

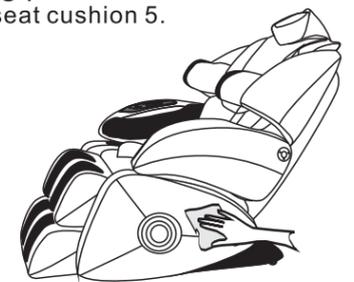

Maintenance and Storage

Routine Maintenance

1. When there is dirt on the equipment, please use cloth soaked with neutral cleanser to wipe the dirty position.
2. Restore the chair armrest and footrest after use.
3. Carefully handle the footrest. Do not press, sit on or step on the footrest.


Storage method

Please keep the equipment in the following conditions:

Ambient temperature: 0°C-40°C

Humidity: (non-condensing) 30% RH~85%RH

Do not store it in a place with high temperature, humidity, or under direct sunshine, or with corrosive gas.

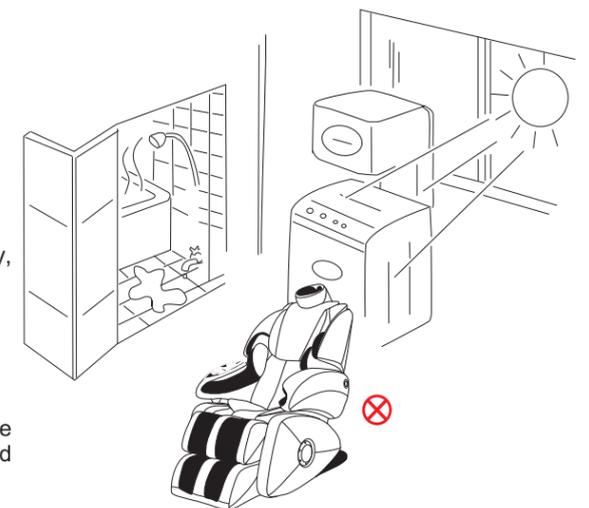


Storage Place

Clean the equipment first. Place it in a dry and dirt-free place. Do not use the equipment in a dirty, oil, humid environment or environment with smoke.

Preparations before Use

1. Where to place it


- Do not keep the chair in a place where humidity is very high like a bathroom.
- Do not keep the chair in a place where it will be exposed to direct sunlight for an extended period of time, or in a place near a heater or radiator where the temperature is very high.
- Lay a carpet or chair mat on the set up place, which can prevent any damage to floor and muffles the noise during massage.
- Do not use in areas of high debris or dust content.
- Keep fire sources such as cigarettes and ashtrays away from the chair.

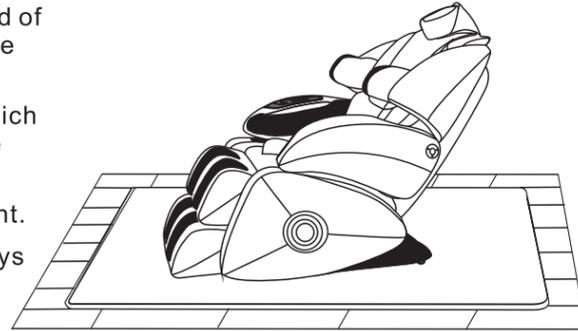

2. Ensure there is sufficient space to allow the massage chair to recline

A. In order to avoid the backrest touching the walls or other objects when reclined, please set the chair 60 cm or more away from the back.


B. Please make sure that no person, pets or any other obstacles is behind the massage chair.

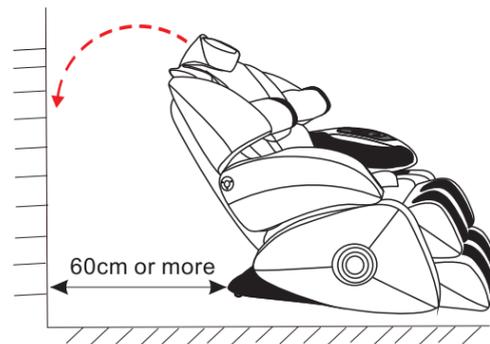

3. How to turn on the power supply

A. Plug the power cord into the socket.

※Before plugging, please be sure to turn the power switch to the "OFF" position.

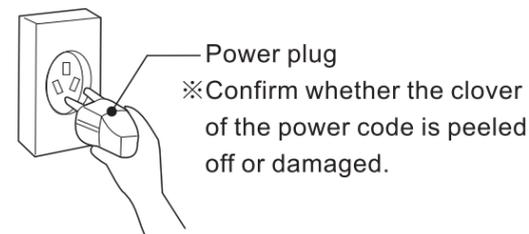

Power plug
 ※Confirm whether the cover of the power code is peeled off or damaged.

Operating Instructions of Remote Control

[ON/OFF] Key
 Press once for starting the machine and enter the auto massage programs; press again to turn off the machine and the massage chair will return to the starting position automatically. (Attention: Once starting the machine, the light turns blue and the seat vibration starts, then entering automatic programs 8 seconds later.)

Combined function of mechanics and air pressure
 You can choose mechanics or air pressure function separately or choose combined function of mechanics and air pressure.

Weightless descending key
Footrest ascending key
Footrest descending key

Fully automatic massage programs
 Six fully auto massage programs can be started once you press each single button which can last 15minutes. (Stretching function can be automatically reverted, other five programs can not.)

Manual Function
 Each function can be selected separately or combined with other manual massage.

Weightless ascending key
Backrest ascending key
Backrest descending key
Weightless key

1. Operating instructions of automatic massage buttons

Press this button once, the massage chair will adjusted to the weightless position automatically and start auto weightless massage to relax the whole body.

Full body massage combined with back, waist and leg stretching. The first press is for men stretching while the light will keep on; the second press is for women stretching while the light will be shining; the third press is for stopping this function.

Swing function for pelvis and waist.

Only press this button once to start auto whole body massage to relax the whole body.

Press once for entering night time massage program for which the massage technique is very soft and especially favorable for those who are exhausted out or needs a rest.

Press once for entering auto massage program of neck and shoulder which start all-round massage for neck and shoulder.



2. Operating instructions for combined massage buttons

Neck and shoulder mechanical massage program button which can be selected alone or combined with air functions.

Back mechanical massage program button which can be selected alone or combined with air functions.

Waist mechanical massage program button which can be selected alone or combined with air functions.

This button is for adjusting air pressure strength freely. Blue indicator means low level, purple indicator means medium level and red indicator means high level.



Whole body air massage program button which can be selected alone or combined with mechanical functions.


Upper body air massage program button which can be selected alone or combined with mechanical functions.

Lower body air massage program button which can be selected alone or combined with mechanical functions.

This key is for manual pause for air massage in 5 seconds.


Installation for Seat Cushion

Connect the 3 air tubes marked with M,L,K with the air tubes on the under frame letter by letter, and then place the seat cushion in place.

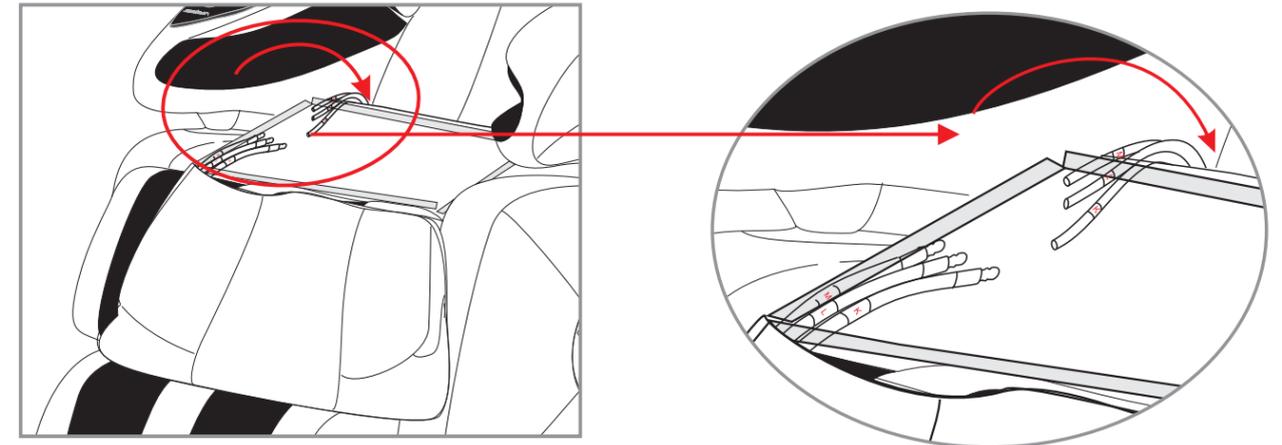

Installation for Back Cushion and Head Cushion


Install the back cushion with zipper on the backrest and install the pillow onto the back cushion with Velcro.

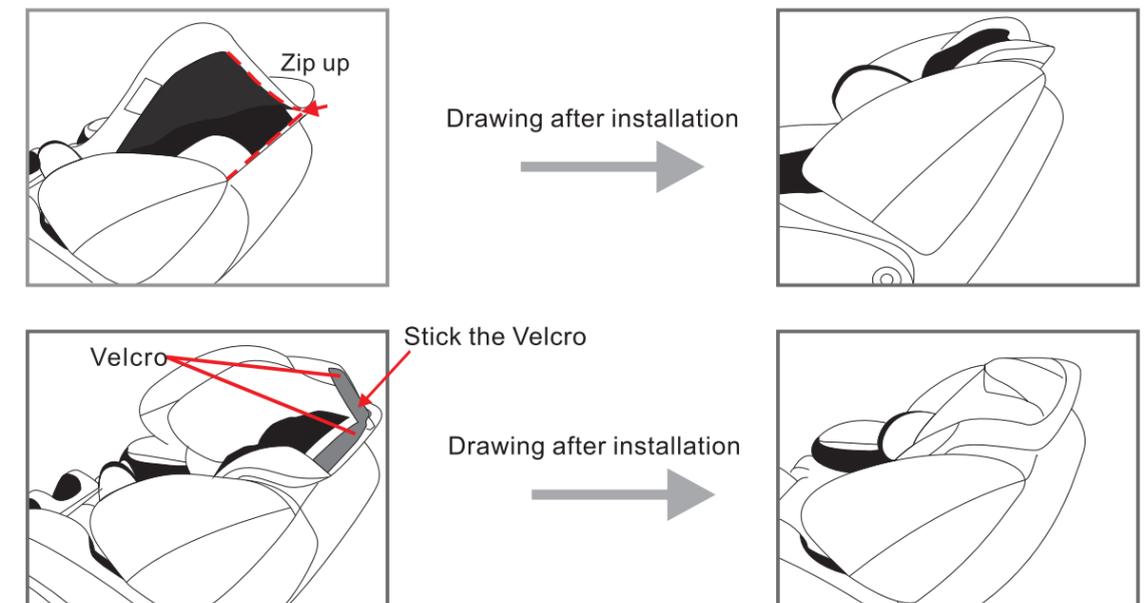


- Please turn the pillow backward during massage.
- In case of very strong massage, use it after installation of pillow.
- In case that it's not used for massage, it can be used as sofa after installation of back cushion and pillow.

Installation for Armrest

1. Accessories for armrest (All the accessories are kept in the power cord box)

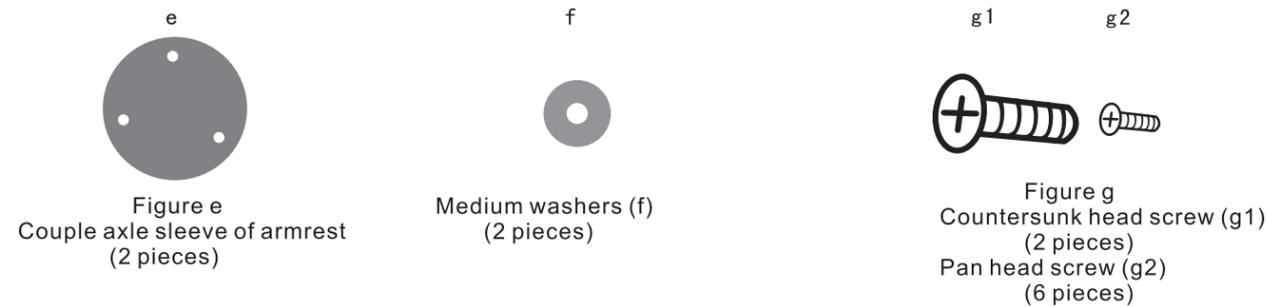

2. Armrest assembly steps

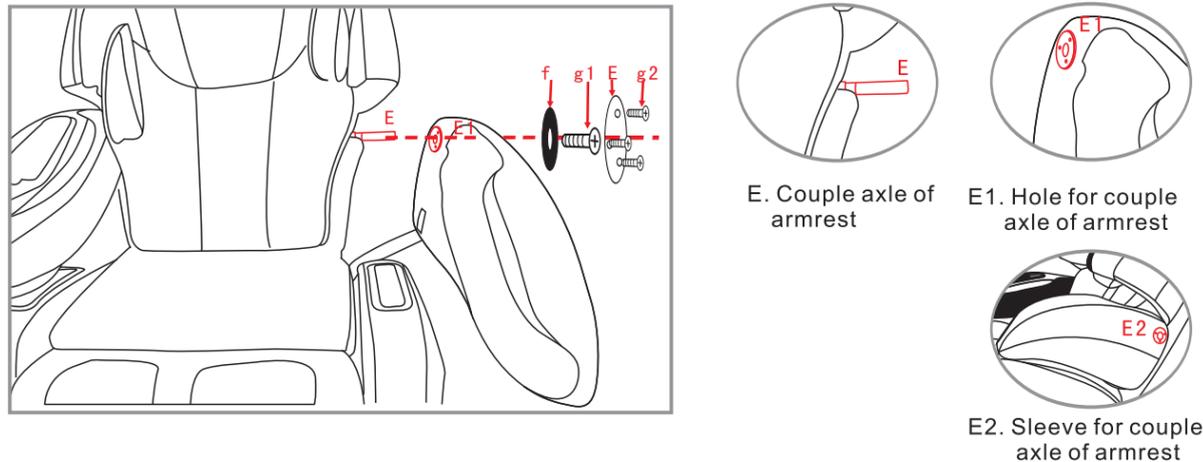

Step 1:

Aim and insert the couple axle of armrest (E) into the hole for the couple axle of armrest (E1).

Step 2:


Aim and fasten one medium washer (f) and one countersunk head screw (g1) into the sleeve for couple axle of armrest (E2).

Step3:


Aim one couple axle sleeve of armrest (e) at the sleeve for couple axle of armrest (E2). Then fasten it with three pan head screws (g2)

3. Connecting the air tubes of the armrest

When carrying out connection, the air tubes of the armrest should be connected with those on the under frame, following the alphabetic orders of F,G,H. Then sleeve them with cloth cover.

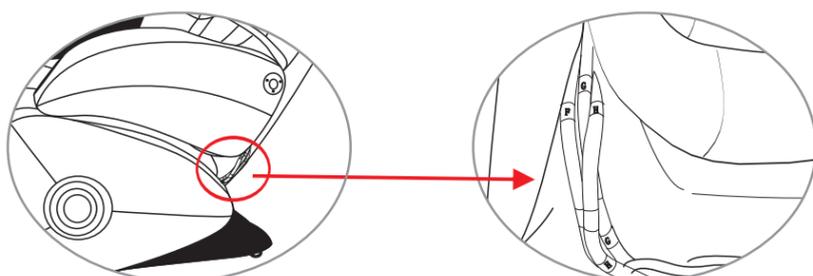

3. Operating instructions of manual ascending and descending function buttons

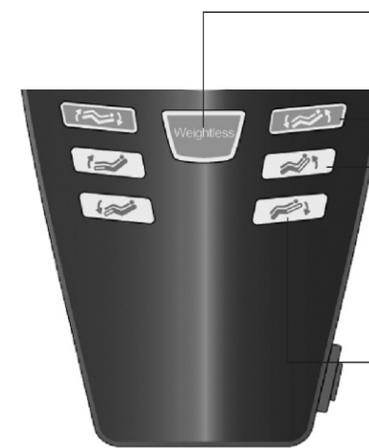

This button is for starting weightless massage. Press once to enter weightless massage status, meanwhile, you can press weightless reclining buttons to achieve the desired weightless massage angle. (This function can be combined with mechanics and air function or manual functions.)
Attention: In weightless massaging, the footrest ascending or descending button is workable, but the backrest ascending or descending button don't work.

This button is for weightless ascending. Press and hold it to raise the backrest and lower the footrest simultaneously. Release it to stop.

This button is for backrest ascending. Press and hold it to start ascending, and meanwhile the footrest descending. Release it to stop.

This button is for backrest descending. Press and hold it to start descending, and meanwhile the footrest ascending. Release it to stop.

This button is for weightless descending. Press and hold it to lower the backrest and raise the footrest simultaneously. Release it to stop.

This button is for footrest ascending. Press and hold it to start ascending, and meanwhile the backrest remain still. Release it to stop.

This button is for footrest descending. Press and hold it to start descending, and meanwhile the backrest remain still. Release it to stop.



4. Operating instructions of manual function buttons



This button is for finger pressing function. Press once to start and press again to stop.

This button is for starting partial massage. Press once to start, and move up and down the massage roller to massage the selected right spot by pressing "●" and "●" button.

(Attention 1. when this button is pressed, you can't select the massage spot by using "●" and "●" button until the massage roller is reset to the top.
2. When you want to reset another massage spot, you have to stop this button and start it again.

This button is for massaging function. Press once to start and press again to stop.

This key is foot vibration & roller key, when using the auto-function, the roller function will be closed if pressing it once, the vibration will be closed if pressing it twice, the roller function will be open if pressing it the third time, the vibration will be open if pressing it the fourth time.

For adjusting the width of the massage rollers in three stages which worked only for finger pressing and tapping massage, and it changed every time the button is pressed. It is indicated by the color on the button. (RED-Wide, BLUE-Medium, PURPLE-Narrow)

This button is for heating function. Press once to start and press again to stop. (It's mainly for waist, legs and ankle heating)

This button is for air pressure massage of hands. Press once to start and press again to stop.

This button is for air pressure massage of seat. Press once to start and press again to stop.

For starting whole body massage. Press once to start and it can be combined with other manual functions selectively.

This button is for manual tapping massage. Press once to start and press again to stop.

This button is for inward and outward kneading massage. The first press is for starting inward kneading, while the second is for starting outward kneading and the third is for stopping.


For adjusting the strength level of kneading massage in three stages, and it changed every time the button is pressed (medium-high-low). It is indicated by the color on the button.
(PURPLE-Medium, RED-High, Blue-Low)

For adjusting the strength level of tapping massage in three stages, and it changed every time the button is pressed (medium-high-low). It is indicated by the color on the button.
(PURPLE-Medium, RED-High, Blue-Low)

This button is for air pressure massage of head. Press once to start and press again to stop.

This button is for air pressure massage of shoulder and waist. The first press is for shoulder massage while the second is for waist and the third is for stopping.

This button is for air pressure massage of legs and feet. The first press is for legs while the second is for feet and the third is for stopping.

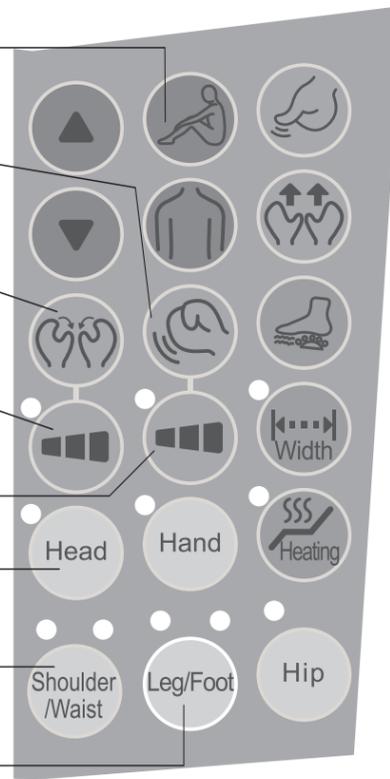

5. Operating instructions for “ROLLER UP” and “ROLLER DOWN” button

- “ROLLER UP” button, the massage rollers will move up when it is pressed continuously, and release it to stop.
- “ROLLER DOWN” button, the massage rollers will move down when it is pressed continuously, and release it to stop.


6. Operating instructions of “PAUSE” button.

This is the “PAUSE” button, press once to stop all the functions, and press again to continue the current program. Pause time will persist 10minutes on default, and the chair will turn off and reset automatically after 10minutes.

Installation for Side Panel

A. Accessories for side panel

(Accessories are attached to the respective parts on the chair)

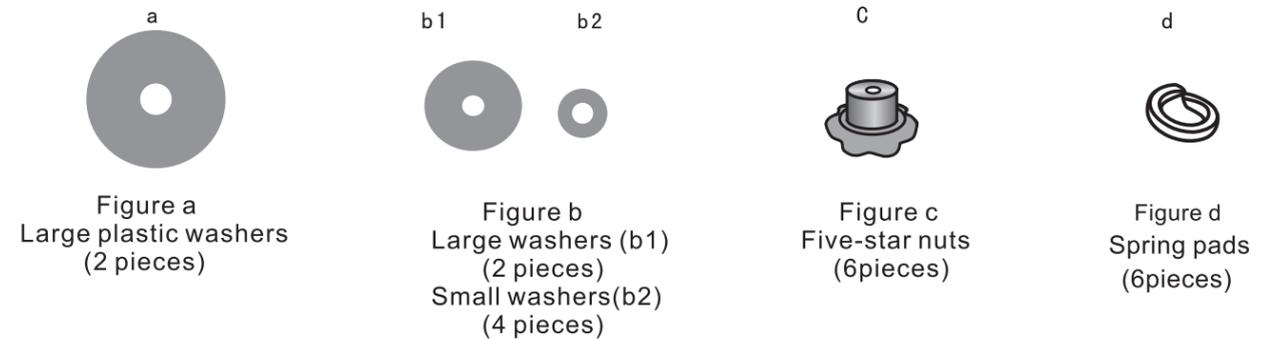

B. Assembly steps

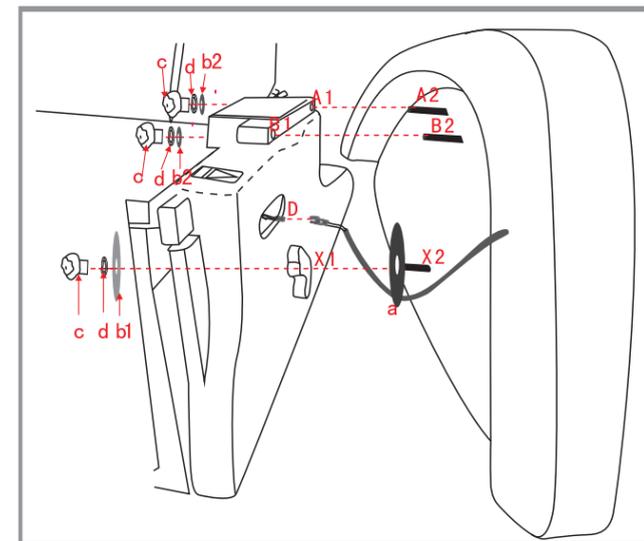


Figure 2

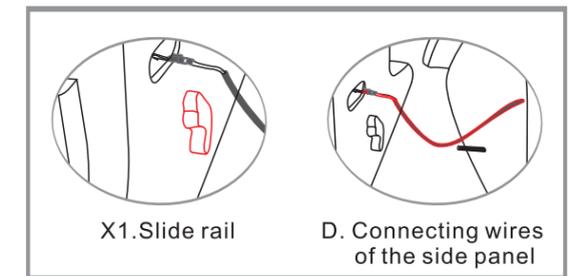


Figure 1

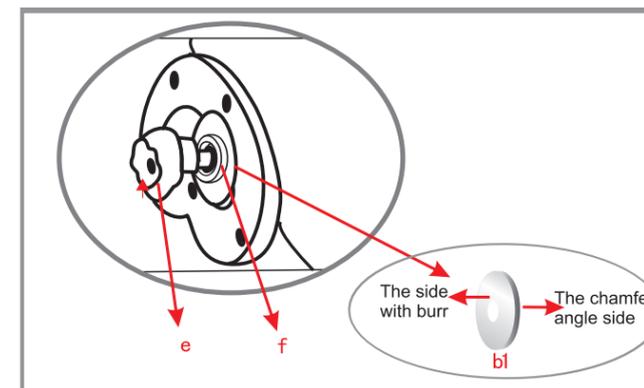


Figure 3


- Step 1:**
Connect the connecting wires of the LED lights of the side panels (Notes: The LED light of the left armrest has one linking wire and the LED light of the right armrest has two linking wires [see Figure 1]). Then insert one large plastic washer a into the screw X2 (see Figure 2).
- Step 2:**
Locate the screw A2, B2 and X2 by aiming them at the corresponding holes A1, B1 and the guide rail X1. Then insert them separately. (see Figure 2)
- Step 3:**
Insert one small washer b2 and spring pad “d” into the screw A2, B2. Then fix them with a five-star nut c. (see Figure 2)
- Step 4:**
Place one large washer b1 and one spring pad d inside the screw X2. Then fix them with a five-star nut c. (see Figure 3)
- (Note: when the iron washer is installed, the stamped side with burr must be directing outwards and the chamfer angle side directing inwards to avoid wearing.)*

Step 2:

A. Proper connect the air tubes in front of chair with the air tubes of the footrest letter by letter. (Marked with N, O, P, Q, R, and T).


Notice: (During connecting, make sure "N" connect "N", "O" connect "O", etc, also make sure that the tubes are swimmingly and not crossover)

B. Connect the connecting wires of the heating cloth, feet roller motor and sole vibration motor accordingly to colors and put on the cloth cover.

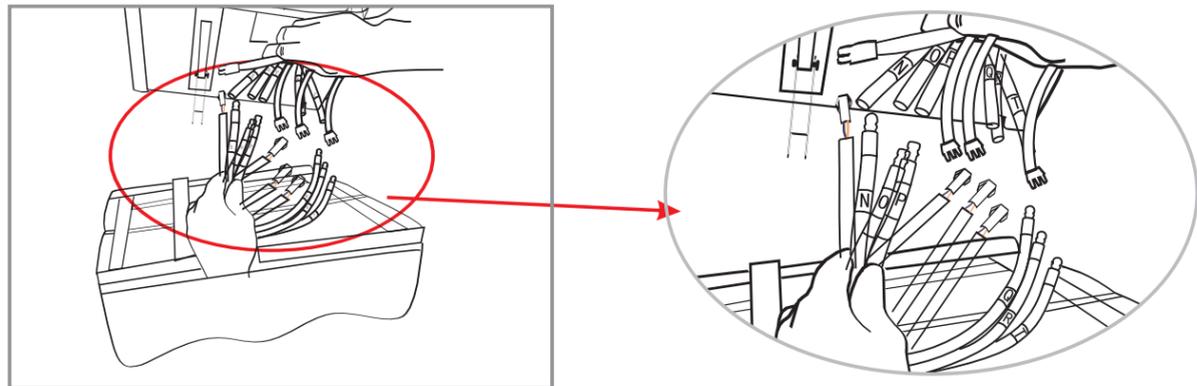


Step 3:

A. Lift up the footrest and connect the footrest with washers and short bolts, and then put the cotter pins and bend them. (The installation methods of both the right and left side is the same). (As shown in below figures).

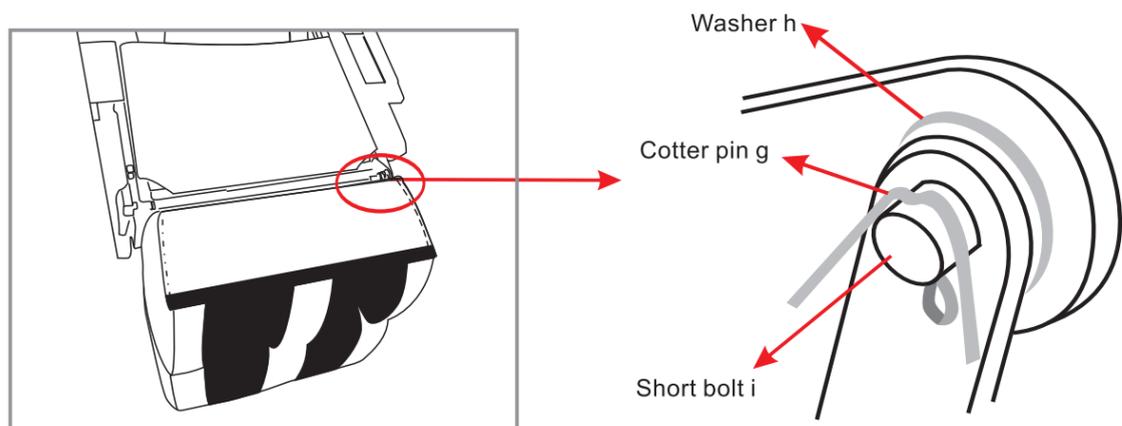

Step 4:

Stick the Velcro and arrange the leather cover well (as illustrated in the right figure).

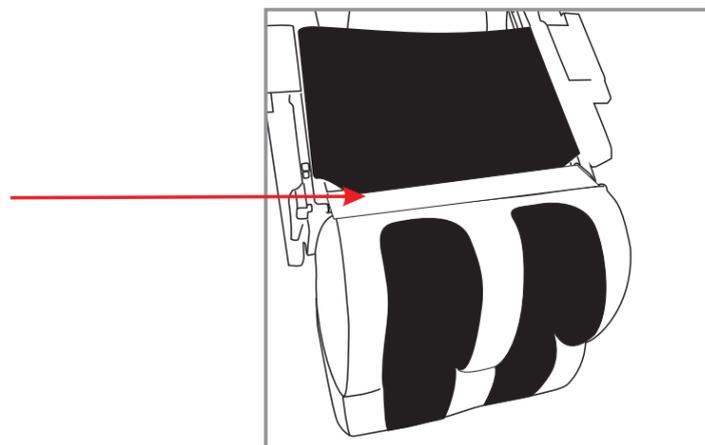


Notices After-Use


A. Reset the chair (the backrest and footrest) to its start position

The chair will reset automatically only under zero gravity and stretching programs. You need to reset the chair manually under other program or manual mode.

1. Press the footrest descending button  to put it down. When the front part touches the ground, keep pressing  for another 3 seconds.

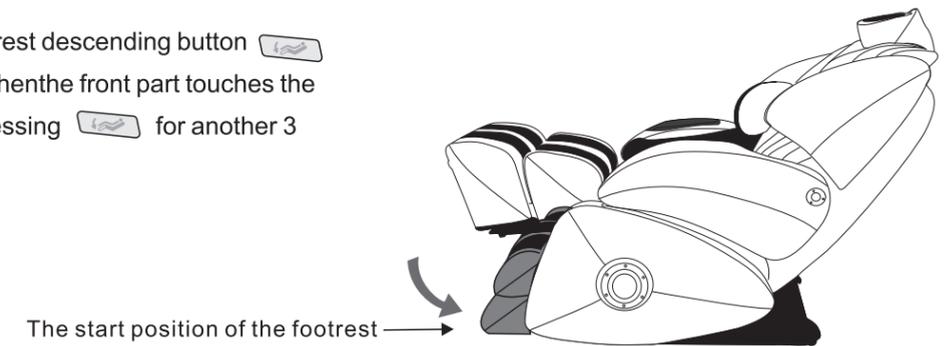


2. Press the backrest ascending key  to raise it up. When the backrest is rising, it's required to keep pressing  for another 3 seconds.

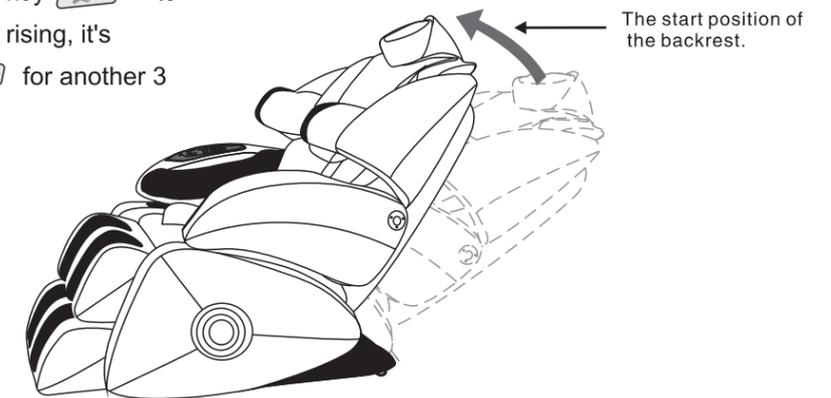

3. Or press the on/off key to turn off the chair and reset the chair automatically.

4. Turn the switch button behind the backrest to  OFF position to switch off the power supply.

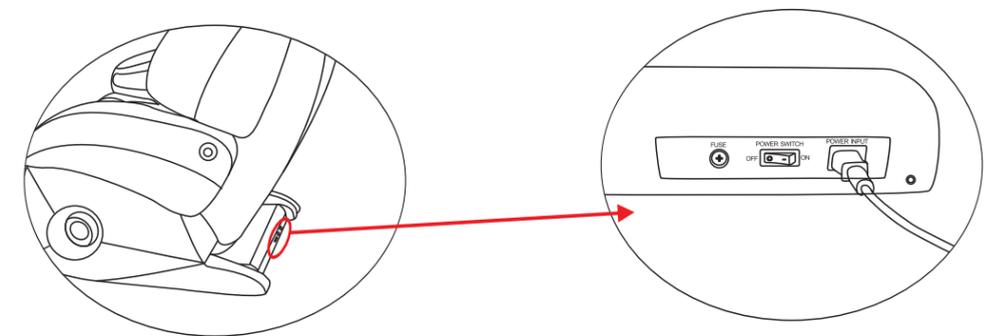


⚠ Caution

- Before put down the chair, make sure no one, especially children or pets near by the chair.
- It is suggested that unplug the power plug from the power source for energy saving.

B、 Moving methods:



1. To move with caster. Remove the power cable from the socket, then raise the footrest and move the chair forward as shown in below picture.

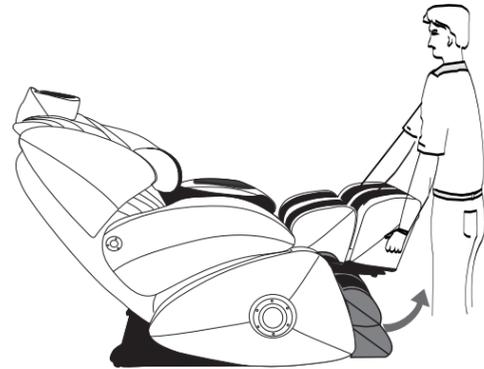


2. To carry, hold the backrest and footrest and move. Hold the chair firmly, or chair may fall and damage the floor or cause an injury.

! <Cautions>

1. During move, please be ware not to let the caster gets entangled with the power cord and do not step on the power cord.
2. If the floor is easily scratched, do not move the chair by rolling the casters. For moving, the chair should be carried by two people.
3. Do not move the chair by rolling the casters on cement floor to avoid damages to the casters.
4. Do not move the chair by lifting, pulling and pushing the armrest to avoid any damage to the armrest.
5. The chair is very heavy, be careful not to hurt your lower back when moving it.
6. If you cannot move the chair, contact the vendor.

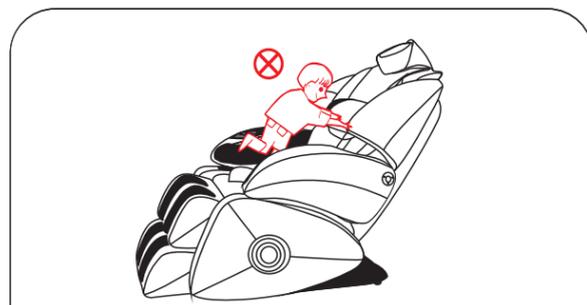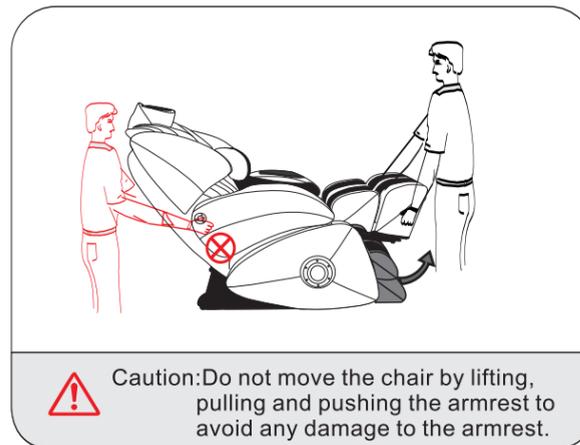

! Please do not sit astride on the backrest, armrest or footrest of the chair. This can avoid any injury and accident.

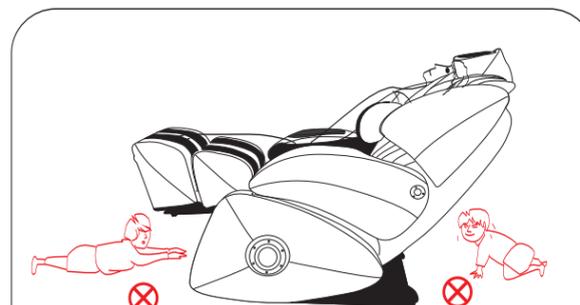

! When lying down backwards or lifting or lowering the footrest, you must make sure there is no people, pets or objects behind the chair or under the footrest, otherwise it may lead to accident, injury or damage to family and properties, etc.

Installation for Footrest

Accessories for footrest (Accessories are kept in one plastic, attached to user manual)



Figure g

Cotter pins g (3 pieces)



Figure h

Washer h(2 pieces)

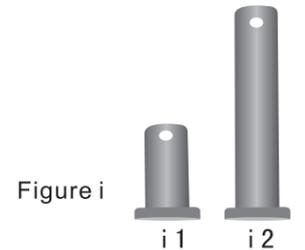


Figure i

Bolt
Short i1 (2 pieces)
Long i2 (1 piece)

B、 Assembly steps:

Step 1:

1. Take out the air tubes, the connecting wires of the heating cloth, feet roller motor and sole vibration motor from the baffled box and divide them into 2 groups;

Group a: Air tubes Q, R, T for feet
Group b: Air tube N, O, P for legs

2. Put out the connecting rod of the footrest (as below figure).

3. Lift the lower part of the footrest, and connect the long square duct(W) with the U-shaped footrest(U) by long bolt i2, then put the cotter pin(g) on and bend it (As shown in the figure)

