


Titan

TP-Carina
MASSAGE CHAIR
Operation Instructions

SAVE THESE INSTRUCTIONS

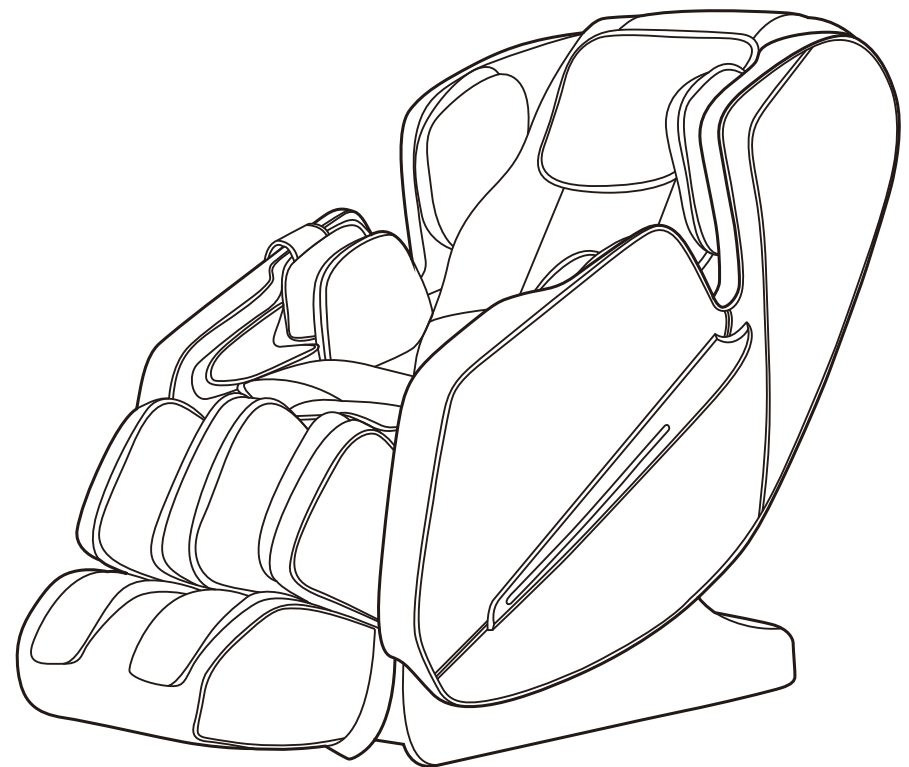

Thanks for purchasing this product. Please read this manual instruction carefully in order to know how to use this product correctly before operation. Please pay more attention to some important safety warning and keep this manual book properly for future use.

Note: Our Company reserves the right to revise the design and description of this product without any further notice. Please refer to the actual color of this product.

CONTENTS

Safety and maintenance	02
Name and function of components	04
Function	05
Method of usage	06
Product specification	13

Safety and maintenance

1. Important Safety Warning.

- Don't allow children to touch moveable part of this product.
- The power outlet must be properly grounded to prevent electrical shock or injuries.
- Please pull out the plug after using or before cleaning the chair to avoid injury or Damage to the product.
- Please operate this product accordingly to the instructions of the manual.
- Do NOT use this chair with any other accessories which may cause serious injury.
- Do NOT use this product outdoors.
- Please read this manual instruction carefully before operating.
- This product must be used accordingly and not be used for any other intentions.
- No more than 30 minutes of usage consecutively is recommended to avoid overheating.
- Please do NOT use if the upholstery is torn or damaged.
- Please do NOT use the chair if the padding is damaged or shows abnormal signs.
- Please use this product in a room temperature environment with very low humidity.
- Please don't drop any objects or loose items into this product.
- Please don't fall asleep while using this product.
- Please don't use it if have consumed any alcohol or feel unwell.
- Please don't use it within one hour after having meal.
- Please monitor the intensity of the massage and if abnormal pain is experienced, STOP using immediately.

Environment for usage.

- Please don't use it in or near high temperatures and moist environment such as bathroom, saunas, heaters and directly by a window that will have direct sunlight.
- Please do NOT place this chair in areas with high dust levels or smoke.
- Please don't use it where there is not enough space or poor ventilation.

• People who are not suitable to use this product.

- People who are suffering from osteoporosis must refrain from using this product.
- People who are suffering from heart disease or implanted/carrying an electronic medical device such as heart pacemaker are not to use this product.
- People who are suffering from fever are not to use this product.
- Pregnant women or women that are menstruating should not use this product.
- People who have a physical injury or skin disease should NOT use this product.
- Children under 16-year old or persons with a mental disability without being supervised should NOT use this product.
- People who are told by doctor to have rest or people who feel unwell are not suitable to use this product.
- Do not use this chair if you are wet in anyway which may lead to serious injury.
- The device has a heated surface. People who are sensitive to Heat must be careful when using this device.

• Safety.

- Check the voltage of the outlet to make sure it meets the required specifications.
- Don't use wet hands to pull the plug from the outlet.
- DO NOT let any liquids make contact with the chair to avoid electric shock or cause damage to this product.

Safety and maintenance

- Do NOT damage the wires or change the circuit of this product.
- Do NOT use a wet cloth to clean the electric parts such as switch and plug.
- During a power outages make sure the chair is unplugged from the power outlet to prevent from the damaging the chair. It is highly recommended to use a surge protector.
- If the chair is not operating properly, immediately STOP using and unplug from the power source. Proceed to contact the manufacturers to service or troubleshoot the problem.
- Stop using this product if you feel unwell, and consult your doctor.
- Children under the age of 16 or person (s) with physical disability or any medical condition should use the chair only under supervision of an adult that is physically capable of assisting the user out of the chair in case of an emergency.
- Children should be supervised to ensure that they do not play with the massage chair.
- If the power cord is damaged, it must be replaced by the manufacturer, its Service agent or similarly qualified persons in order to avoid electrical hazard.


5. Maintenance.

- If any maintenance is required please contact the manufacturer for instructions. Some maintenance may require an authorized technician to conduct the service.
- Please unplug the power cord from the outlet whenever the chair is NOT being used.
- If the power cable has any indication of defect or is not fitting properly into the outlet, unplug and STOP using. Contact the manufacturer.
- If this product will be left unused for long period of time and is put into storage make, sure the storage area is dry , very low humidity and kept at room temperature from 65-85 F.
- Don't position this chair near any heat source like fire place, heater vents directly by a window with intense sunlight.
- If the detachable cord / supply cord is damaged, it must be replaced by the manufacturer, in order to avoid a injury and hazards.
- Please clean this product by dry cloth. Don't use thinner, benzene or alcohol.
- The mechanical components of this product are specially designed and made, it is not necessary to be specially maintained.
- Don't roll or pull this product on uneven ground, it should be lifted before moving.
- Do not use this product consecutively for more than one hour. Allow for at least 15 minutes to cool down.

• Typical Troubleshooting

- When the massage rollers in the backrest is making a motorized sound, it is normal part of the operation. If the motors are making any loud grinding or clicking sound please contact the manufacturer.
- If the the remote control is not responding properly, please check to see if that none of the buttons are stuck, pressed down into the remote. Also check the wire connection is firmly connected to the base and that there is no damage to the wire from the remote to the chair.
- When the chair has completed its preset program the chair will automatically turn off. If the chair has been use a long period of time without rest, the chair will shut off automatically to avoid overheating. Allow for 30 minutes to pass before using again.

Name and function of components

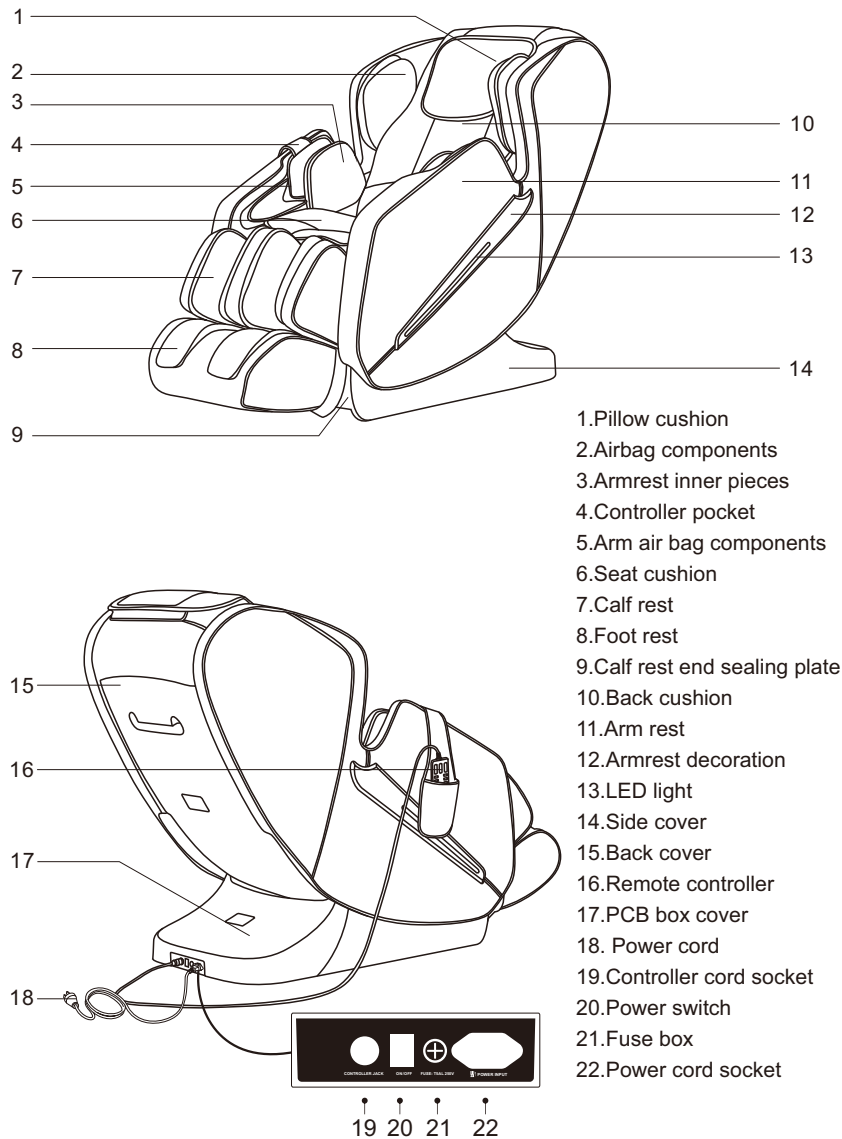

Function

Function

• **MASSAGE ROLLERS**

- The roller mechanism is designed with 4 roller heads that will massage on a vertical and horizontal axis. There are 5 different massage styles, shiatsu, kneading, flapping, knocking and combination.
- There are 6 preset programs to select from, relax, comfort, full body, neck & shoulders, back & waist and stretch.
- There are 3 memory settings where the user can select a style massage activating airbag massage and storing your favorite combination into its memory. The user is capable of creating a customized massage program.
- In the manual mode, there are 5 key massage points identified by the roller head, ranging from the neck to lower back. In manual mode the user is able control the range of massage area from a single point, partial and whole back.
- In manual mode you can control the speed of the massage with 3 different speeds.
- For the Tapping, shiatsu and kneading the user can adjust the width of the massage heads from narrow, medium and wide.

• **AIR MESSAGE**

- The air massage in manual mode allows the user to select from full body, Arms or legs. The compression created by the squeezing of the airbags have 3 intensity levels, mild, medium and strong.

• **FOOT MESSAGE**

- The foot and calf massager is equipped with airbag compression technology along with foot scrapping massage.
- The footrest can be extended for the taller user by adding pressure to the bottom of the footrest, stretching out your legs.
- The legrest will raise and lower by pressing the button from the remote.

• **SPACE SAVING TECHNOLOGY**

- When the chair reclines the chair will glide forward to dramatically reduce the space required behind the backrest. This will allow for maximum usage of the given space in the room.

• **L-TRACK MESSAGE**


- massages from the neck past the glutes to the back part of the hamstring.

• **LED CHROMOTHERAPY**

- Located on the side panels are LED Lights that will emit a blue to the surrounding area in a dark room, creating a relaxing environment.

Method of usage

Illustration of the actual remote control

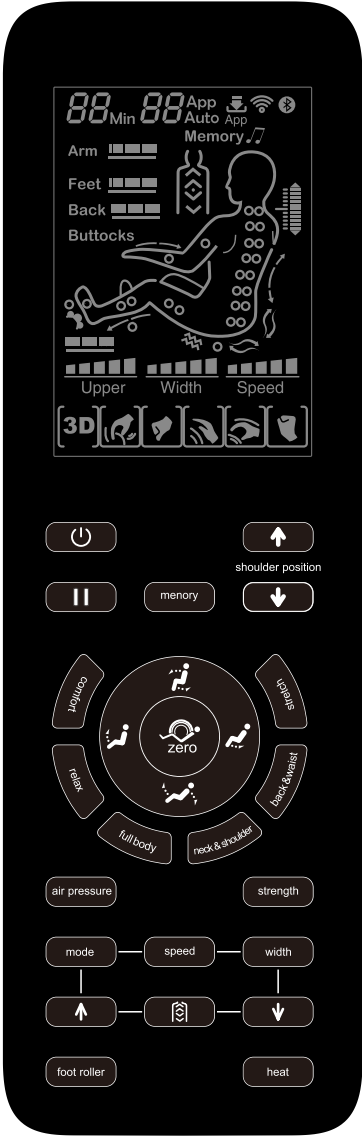

Method of usage

1.Switch power supply on position




Connect the remote to circular outlet The power cord is inserted on the right outlet

2.start massage

- ①、Press power button to start massage process.
- ②、Select a massage program and the chair will conduct a computer body scan for the first 30 seconds.
- ③、Once the body scan is complete you immediately adjust the massage starting point if you wish to start higher or lower. There is a 5 sec window to make the adjustment..

Button	Description	Display
 "Up" Shoulder Position	Press to move the roller heads to a higher position	
 "Down" Shoulder Position	Press to move the roller heads to a lower position	

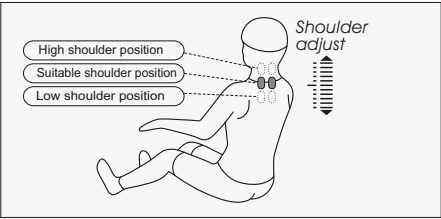

During the computer scan the rollers will detect the position of the shoulders. The monitor will indicate the where the rollers are during the analysis period. Right after the scan is complete the remote will make a "beeping sound", during that time you will be able to adjust the starting position of the massage higher or lower using the up and down button on the remote. There is only a 5 sec time period to initiate the adjustment before the massage starts. There are 6 preset massage programs to select from along with 3 memory settings.

- Memory function massage: in manual mode select a custom massage and press and hold down one of the three memory buttons store the massage for the next time.

Button	Description	Display
Memory program		Memory

Method of usage

· Characterized auto massage

Function	Button	Description	Display
Characterized auto massage		Intended to loosen the muscles	F1 Auto
		Deep tissue massage throughout key acupressure points.	F2 Auto
		Full body massage, relax and soothing.	F3 Auto
		Focuses on neck and shoulder area	F4 Auto
		Focuses on back and waist area	F5 Auto
		The calf-rest and back-rest lifting together , combined with air pressure massage to stretch the calves and legs.	F6 Auto

· upper body manual massage

Function	Button	Massage ball adjustment	Display
Mode		Shiatsu: speed, width	
		Kneading: speed	
		Tapping: speed, width	
		Kneading& flapping : speed	
		Knocking: speed, width3	
Speed		3 adjustable level	
Width		3 adjustable level	
Back Stretch		The massage hands stay in one fixed position	
		The massage heads will move up and down in a partial position	
		The massage hands will move up and down the entire back	
		The massage heads will move up and down on the back and shoulder area	
		The massage rollers will move up and down on the back and waist area	
		Use these buttons to adjust the roller position in the point and partial massage program.	Hands move up
			Hands go down

Method of usage

· Air press function

Function	Button	Description	Display
Air press Mode		Full air pressure: air pressure massage on arm, calf and foot part.	Arm  Feet 
		Arm: air pressure focuses on arm.	Arm 
		Calf : air pressure focuses on calf & foot.	Feet 
Strength		3 intensity settings, mild , medium and strong	Arm  Feet 

· Foot roller , heat manual function

Function	Button	Description	Display
Foot roller		Foot rollers with 3 speed adjustments	
Heat		Far infrared back heating, producing a mild warm heat along the back	

· Pause/starts

Function	Button	Description	Display
Pause/ Starts		Press this button during massage process, all the massage function will stop immediately. Press this button again, all the massage will be resume	

· Backrest and calf position adjust

Function	Button	Description
Calf rise		Press and hold this button to slowly lift the legrest. Once it has achieved the maximum height it will stop and a beeping sound will alert.
Calf drop		Press and hold this button to slowly lower the legrest. Once it has come down to the default position a beeping will go off.
Backrest rise		When pressing and holding this button it will raise the backrest and lower the footrest simultaneously.
Back rest drop		When pressing and holding this button it will recline the backrest and raise the footrest. A beeping sound indicates that it has reached it maximum position.
Auto lay down mode		When pressing this button it will automatically place you into the zero gravity position.

Method of usage

3. Turning off power and programing

- When pressing the power button during the massage it will automatically stop all functions. Press the power button twice and it will go back to the default position.
- Memory function** : To program your favorite massage wait till the massage timer has ended. Then hold down one of the three memory buttons and hold down until you hear a beep. Once completed you can press the power button and turn off the chair. Your setting has been stored into the chairs memory.

Button	Description	Display
Memory program	Memory	Memory

- Cut off the power of the whole machine.
Figure (Switch power off)



4. Calf installation

- The install hole of rail shelf (chart 1).
- Align the holes from the footrest the front of the chair. (Outside) (chart2).

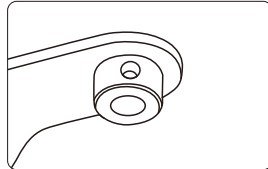


Chart 1

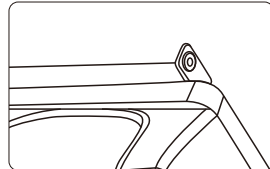


Chart 2

- Place the flat washer into the pin shaft. (chart3).
- Insert the pin and washer as shown in chart 4. Be sure to insert the pins on both side with the fat part of the bolt facing inwards.

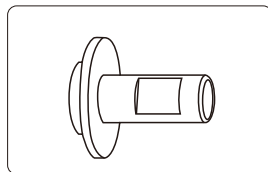


Chart 3

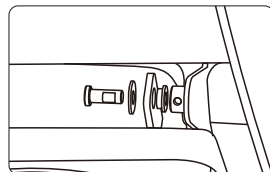


Chart 4

Method of usage

- Use the Allen wrenches lock two hexagon socket head screws. (chart5).


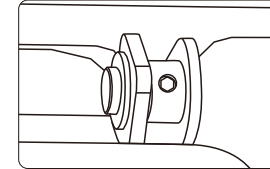



Chart 5

Note

- Once the legrest is firmly in place, press mildly down on the calf portion of the legrest to make sure it is correctly mounted. Be sure your legs and feet are not directly under the legrest when mounting or testing to ensure your safety.
- On the top part of the legrest is a cover(tab) that goes under the seat cushion (chart 2). be sure the tab is laying flat under the cushion.

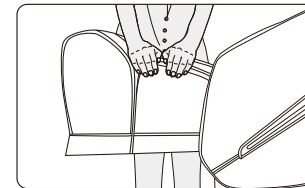



(chart1)

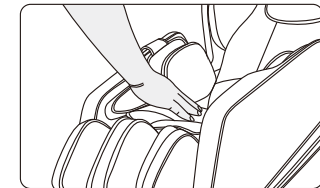


(chart2)

5. Mounting the bakrest pad and head cushion

- The multi-layered pillows allow you tho control the intensity of the neck and shoulder massage. Flip back each layer to increase the intensity as shown below.
- Backrest cushion and backrest is connected by zipper (1), head cushion and backrest pad connected by tvelcro as shown in illustration (2).

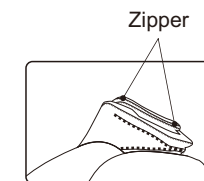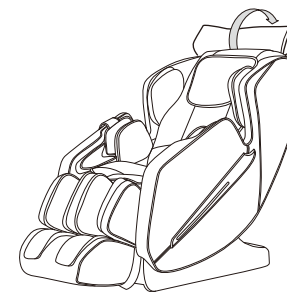


(1)

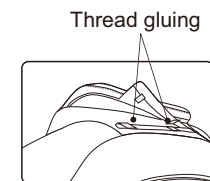

(2)

Method of usage


- 6.Floor Protection & reducing the Sound of motors and pump**
- When placing this chair on wood floors you MUST place a mat under the chair to prevent from damaging your floors and also to reduce the sound of the pump and motors when operating.

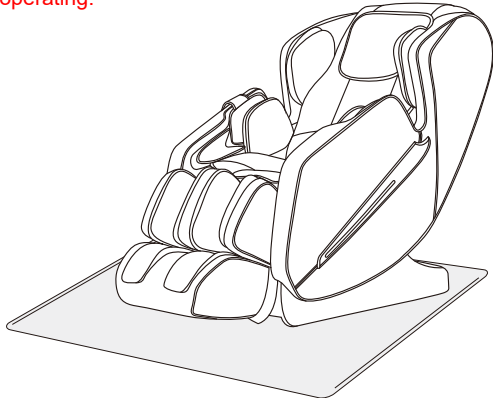

Caution: Do not move the chairs with built in wheels on wood floor, rough ground and uneven ground.
Two people are required to lift the chair by its frame when moving. Do not grab the side panels when lifting the chair.

7. Moving and Lifting Points

If the floor is smooth and leveled the chair can be simply moved by grabbing the handles on the backrest as show below and lifting. There are 2 wheels in the from allowing you to push forward. Please note do not attempt on wood floors.
To lift the chair grab the chair from under the base. Other option would be turn on the chair and raise the legrest to the highest position and unplug the chair from the back.
The first person can grab the handles located on the backrest and other grabbing from under the legrest in the raised position.

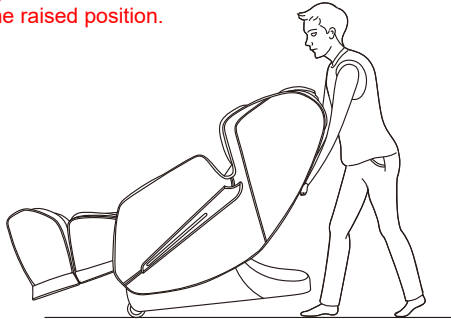

Note:Whenever attempting to move the chair be sure the chair is unplugged and the remote is placed in safe location that will fall out.

Product specification

Model: TP-Carina
Name: Massage Chair
Rated voltage: 110-120V~ 60Hz ☐
220-240V~ 50Hz/60Hz ☐
Rated power input:150W
Rated time: 20Min
Safety structure: Class I

Material introduction: PVC, PA, steel parts and electric &ele-ctron parts

MATERIAL	PU	LEATHER	CLOTH	WOOD