

Montage Elite Massage

By Omega Massage, Inc.



Health Massage Chair

Air bags

Heat therapy

VFD display

Five auto programs

User's Manual

Omeg Massage,Inc thanks you for choosing the Montage Elite or the Montage Premier massage chair.

We encourage you to read through this manual before operating your new massage chair. We present you with the proper ways of using the massage chair and point out some notes on safety.

Your massage chair has been designed to provide you with years of enjoyment. Please keep this manual in a safe place for future reference.

Contents

Important Safety Instructions-----	1~4
Part Names and Functions-----	5~10
Massage Chair Set Up & Preparation-----	11~17
Massage Programs -----	18~22
Care and Storage of your Massage-----	23
Massage Chair Specifications-----	23
Troubleshooting your Massage Chair-----	24

Important Safety Instructions -Please Read First

ELECTRIC SHOCK DANGER

-To reduce the risk of electric shock:

Always unplug the massage chair from the electrical outlet immediately after using and before cleaning.

Warning

-Follow these guidelines to reduce the risk of burns, fire, electric shock or other injuries:

- 1) Do not leave the massage chair unattended when it is plugged in. Unplug from the electrical outlet when not in use, and before putting on or taking off parts.
- 2) Children, invalids or disabled persons should be closely supervised if they use or will be near the massage chair.
- 3) The massage chair is only for use consistent with this manual and should not be used for any other purpose. Do not use attachments not recommended by the manufacturer.
- 4) Keep the electrical cord away from any heated surfaces.
- 5) Never operate the massage chair where the air openings could be blocked. Keep all air openings free of lint, hair or other particles which could clog the air openings.
- 6) Never drop or insert any object(s) into any opening of the massage chair.
- 7) Do not use the massage chair outdoors or in any unprotected area. Keep the massage chair away from wet or humid areas.
- 8) Do not operate the massage chair where aerosol (spray) products are being used or where oxygen is being administered.
- 9) Only connect the massage chair to a properly grounded electrical outlet. For more information, see Grounding Instructions.

Grounding Instructions

This product must be grounded. In the case of breakdown or malfunction, grounding provides a path of least resistance for the electric current to reduce the risk of electric shock. This product is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

We recommend that you use a surge protector with this product.

Danger

Improper connection of the equipment-grounding conductor can result in the risk of electric shock. Check with a qualified electrician or serviceman if you have any doubt as to whether the product is properly grounded. Do not modify the plug provided with the product. If the plug will not fit the outlet, have a proper outlet installed by a qualified electrician. This product has a grounding plug. Make sure that the product is connected to an outlet having the same configuration as the plug. No power converter should be used with this product.

Please Save These Safety Instructions

Important Safety Instructions -Please Read First

1.Usage Environment

- Do not use your massage chair in an excessively humid or dusty environment, as it may cause electrical shock or malfunction.
- Do not put your massage chair in a room with a temperature higher than 104F (40C).
- Do not place your massage chair next to any heat sources such as heaters, stoves or direct sunlight.
- Do not place your massage chair on a non-leveled surface.



CAUTION

- You should use your massage chair in a cool room, where the temperature will not fluctuate abruptly. It is recommended that if you change the temperature in the room with your massage chair, that you do so gradually. If your massage chair is stored in a cold room and moved to a warm room, that you should wait one hour before operating. Malfunctions can occur when a cold massage chair is suddenly used in a warm room.

2.Unsuitable Users

If you have one of the following conditions, please consult your doctor before using the massage chair:



CAUTION

- If you are currently under the care of a doctor or not feeling well.
- If you have malignant tumors.
- If you have heart disease.
- If you are pregnant or menstruating.
- If you are under doctor's orders to rest.
- If you have any spinal disorders, curved or abnormal spine conditions caused by an accident or illness.
- If you have a high fever.



3. Operating Safety Precautions

- To ensure the safe and proper use of this massage chair, do not operate without first carefully reading this user's manual.
- Do not use the massage chair with other therapeutic equipment, electric blanket, etc, as it may result inefficacy or injury.
- Do not allow children or pets to play on or around the massage chair (i.e. behind the backrest, under the seat, or footrest) as they can be injured by the moving parts during the operation of the massage chair.
- Do not place heavy objects on the armrest, footrest or back rest as they can fall and injure someone or hinder the massage chair operation.



Important Safety Instructions - Please Read First

- Do not use the massage chair if you are wet or are wearing wet clothes.
- Do not operate the massage chair with wet hands.
- Do not massage one part of your body excessively or for continuous long periods of time as it may cause pain, discomfort or injury.
- Do not insert your hand, foot or other body parts along the paths of the massage rollers during the operation of the massage chair as it may cause injury to the user.



CAUTION

- Always sit in an upright position during the operation of the massage chair.
- You may place a blanket, towel or back pad over the backrest if you prefer a softer massage.
- Do not use the massage chair as a bed.
- Do not apply the massage rollers directly on the head, joints of elbows, abdomen or other non appropriate areas.
- The recommended usage time is 15 minutes per day. We do not recommend continuously massaging the same spot for more than 5 minutes. Consult your health care provider about what the proper times are for you.

4. Discontinue Operation Immediately in the Following Situations:

If one of the following situations occurs, immediately switch OFF the power and disconnect the AC power cord from the Electrical Outlet. Please contact our service department if you are unsure whether you should continue to use the massage chair in these situations.

- If the massage chair becomes or gets wet, stop the operation immediately to avoid potential electrical shock.
- If you feel abnormal or severe pain during the massage, stop the operation immediately and consult your doctor.
- If you find any malfunction or any other abnormal condition during operation.
- If there is a power failure or a power surge, stop operation and disconnect AC power cord from the Electrical Outlet until power is restored.
- If there is severe weather conditions such as lightning storms.

NOTE: Lift the backrest pad regularly to check for tears in the upholstery of the central cloth portion of the backrest



- Do not disassemble the back cover from the massage chair, touching the inside mechanisms may result in electrical shock.
- Never service the massage chair by yourself; this may void your warranty. Please contact our service department.

Important Safety Instructions - Please Read First

5. Important information about the Power Plug and Cord


Check that the voltage of the massage chair corresponds with the specifications indicated for the Chair (only for alternative current).

- Do not roughly disconnect the AC Plug from the Electrical Outlet.
- Do not connect or disconnect the AC Plug from the Electrical Outlet with wet hands as it may result in electrical shock.
- When disconnecting the AC Plug, pull it out by holding the plug and never by the cord.
- The Auto-Timer function stops the massage chair automatically; however, you should switch off the main power after operation.
- Do not place the AC cord under the massage chair as it may damage the cord and result in electrical shock or fire.
- Do not use the massage chair if the power cord or plug is damaged. Please call our service department.
- Do not use the massage chair if the Electrical Outlet is loose or the plug does not fit snugly into the Electrical Outlet.


6. Caution with the Remote Controller

- Do not sit, step or place heavy objects on the Remote Controller.
- Do not drop the Remote Controller. It is recommended that you place the Remote Controller back in its support when not in use.
- Do not exert excessive force on the Remote Controller.
- Do not operate the Remote Controller with wet hands.
- Do not operate the Remote Controller using sharp or hard objects as this may damage the Remote Controller.

Part Names and Functions

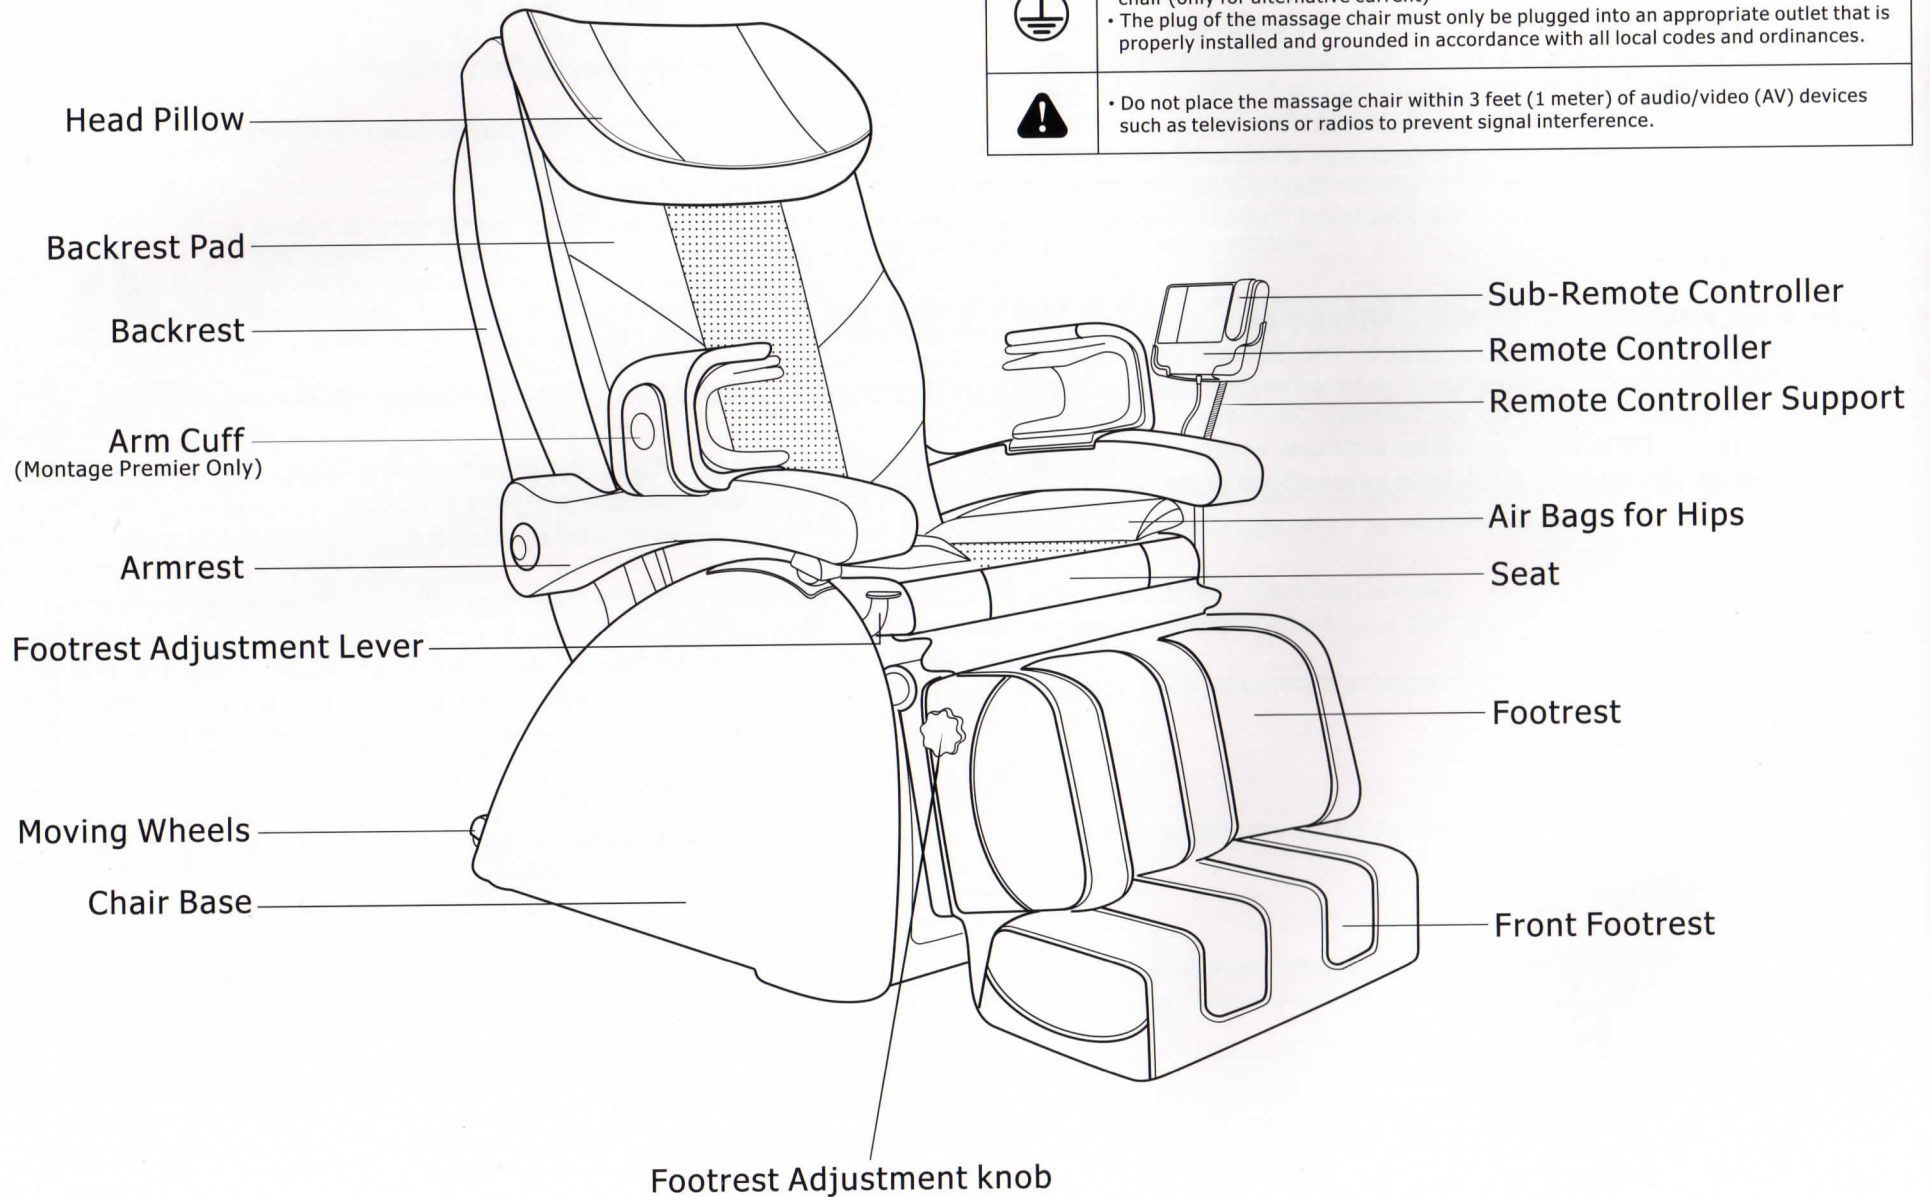


Part Names and Functions

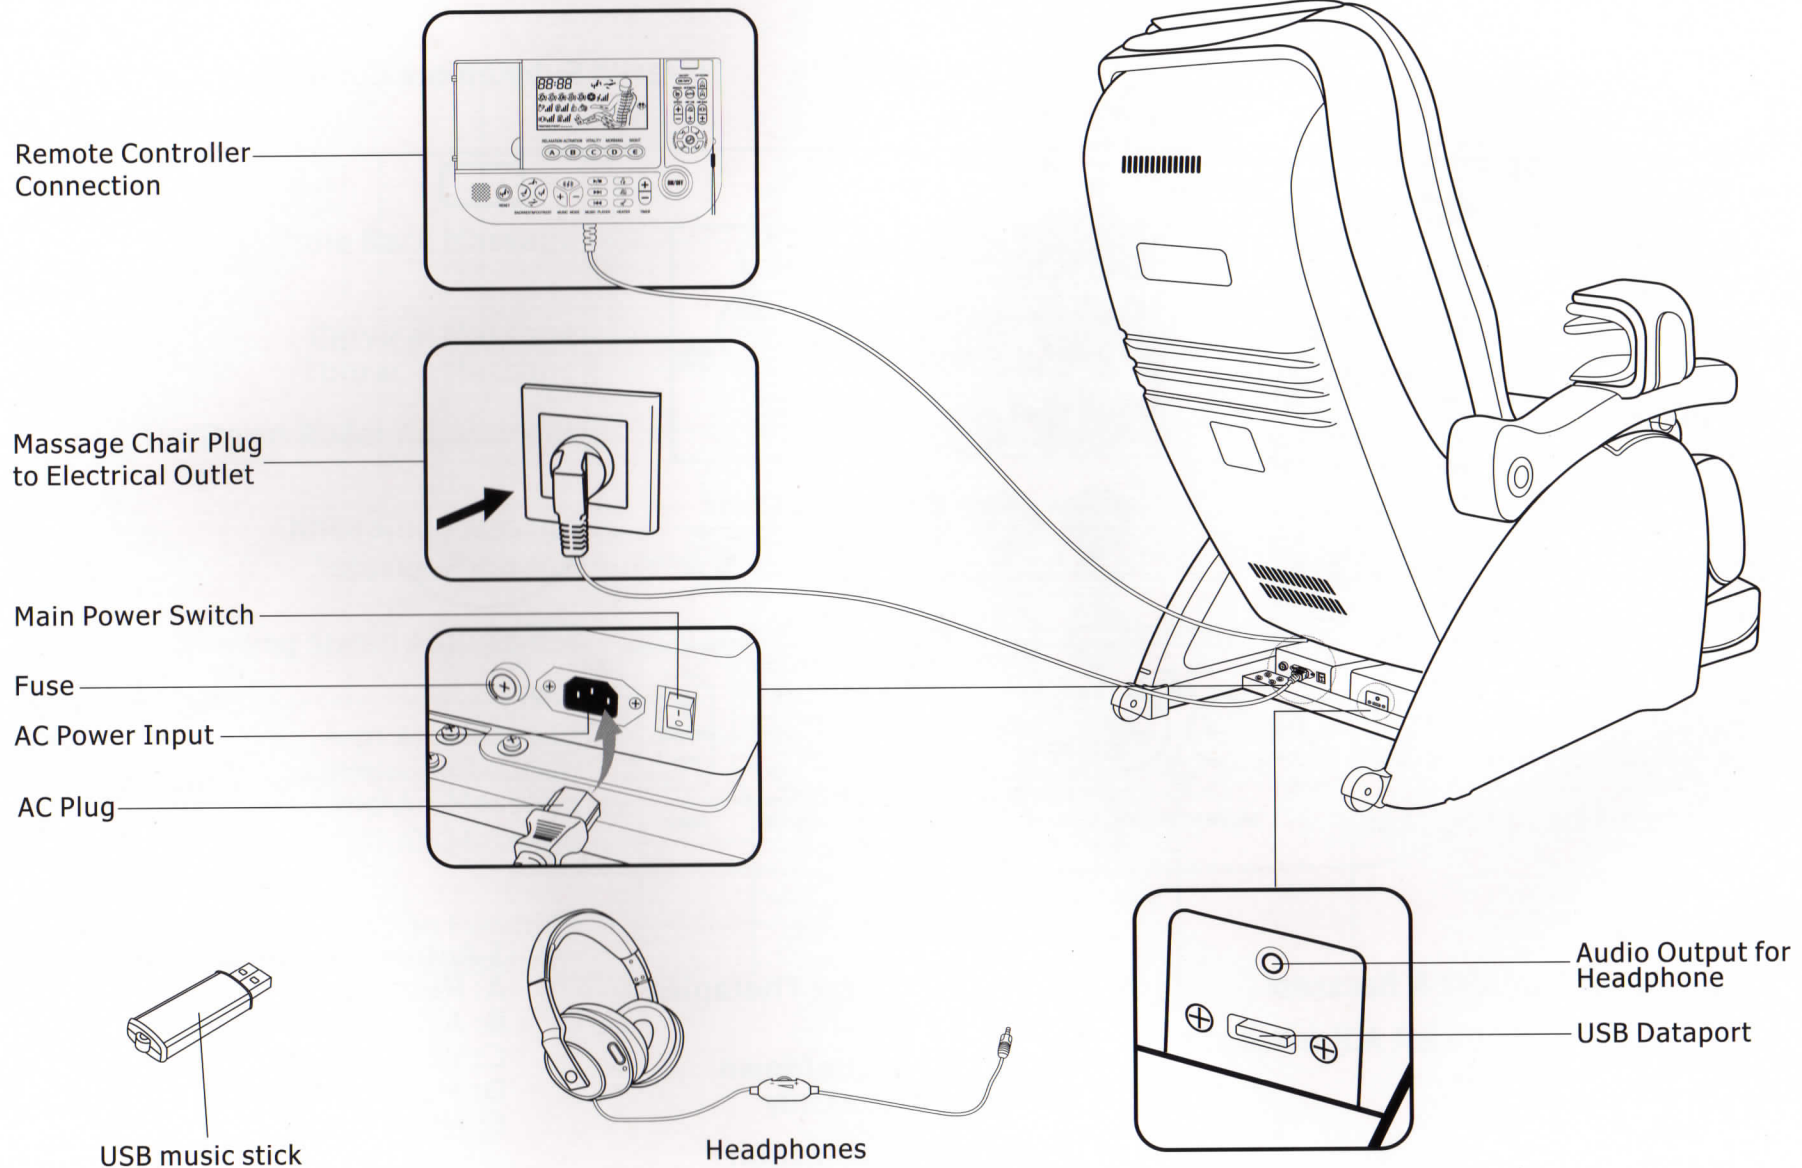


Part Names and Functions

Remote Controller Overview

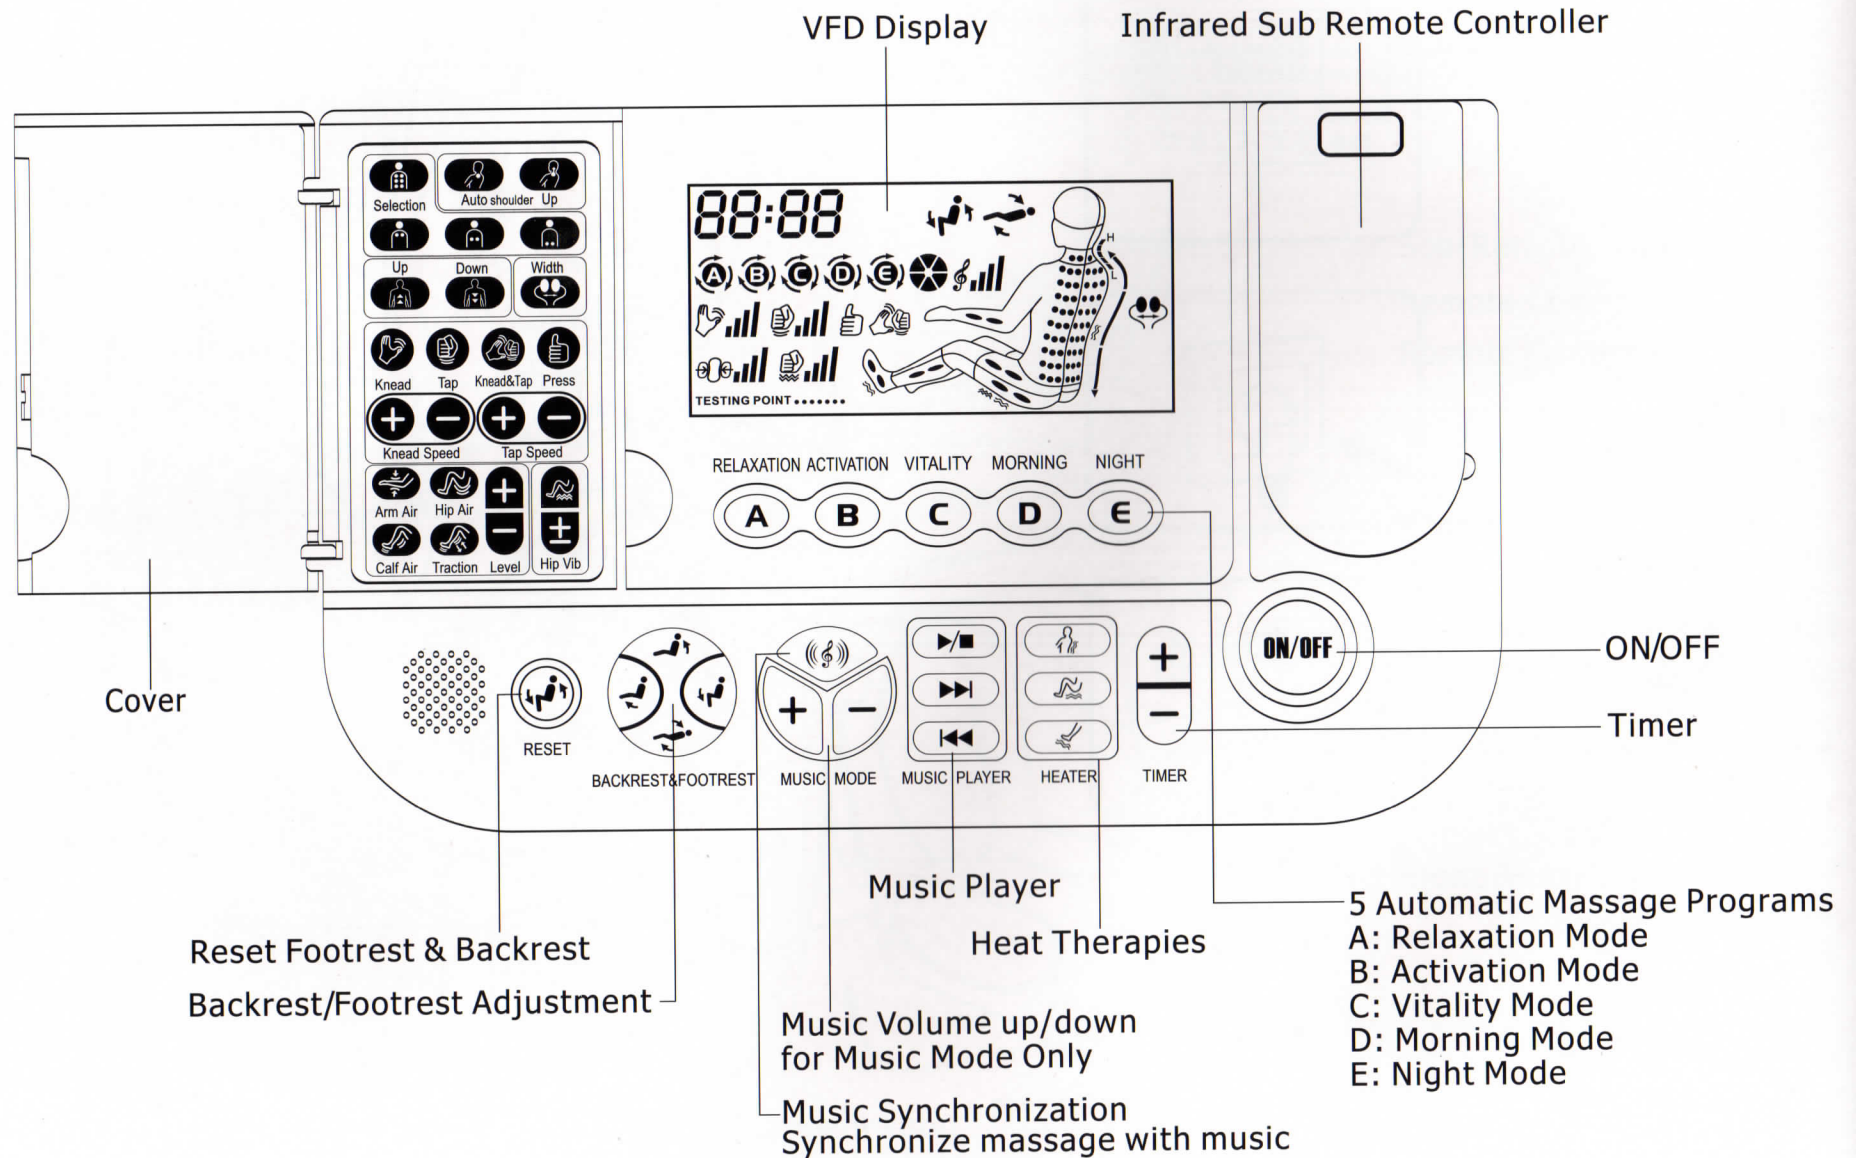


Part Names and Functions

Remote Controller Manual Adjustments

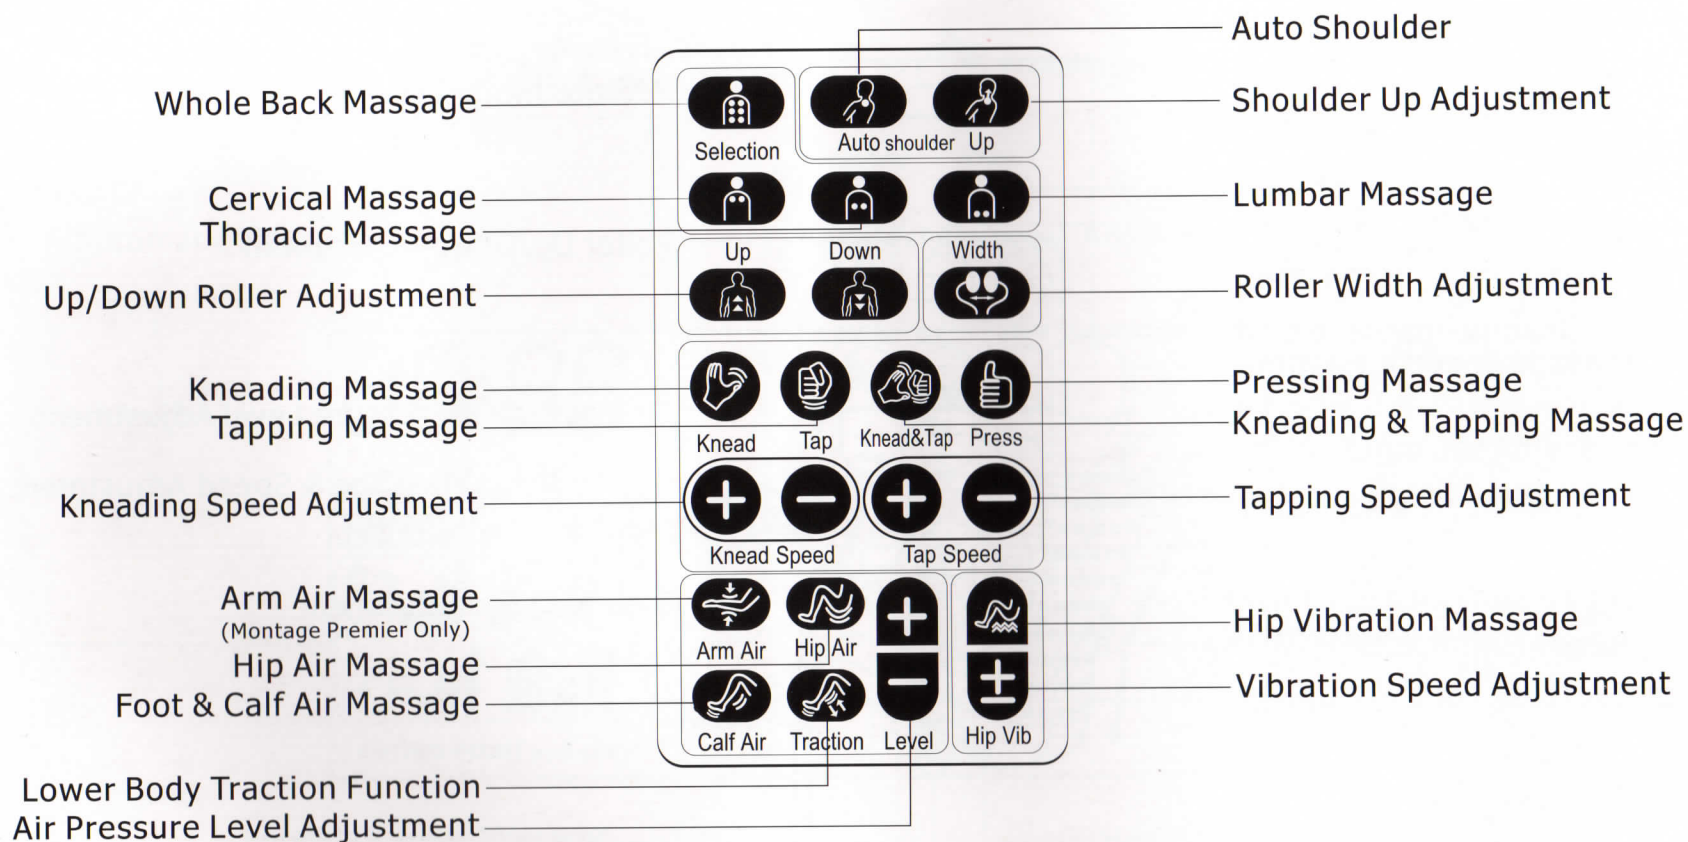



Part Names and Functions

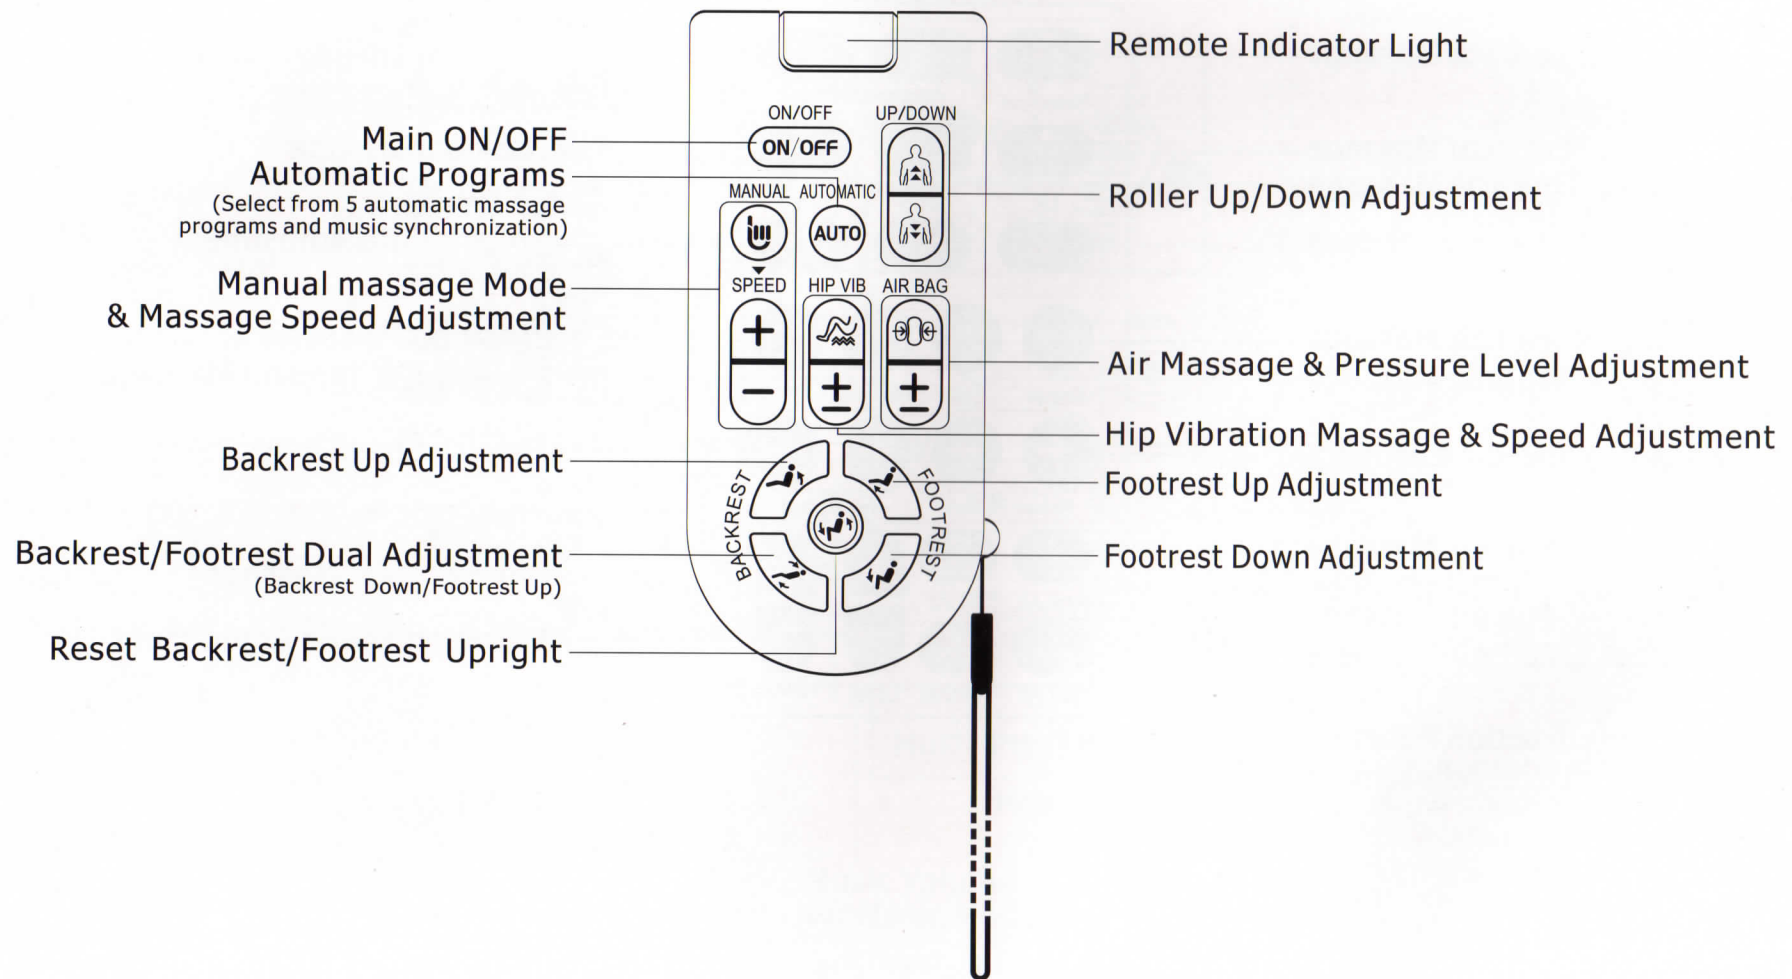
Infrared Sub-Remote Controller





Part Names and Functions

 Kneading Massage
& Speed Adjustment

 Tapping Massage
& Speed Adjustment

 Pressing Massage

 Air Massage & Air Pressure
Level Adjustment

 Hip Vibration Massage
& Speed Adjustment

 Kneading & Tapping Massage

5 Automatic Massage Programs

Music Mode


Backrest/Footrest Adjustment

Timer

88:88



TESTING POINT

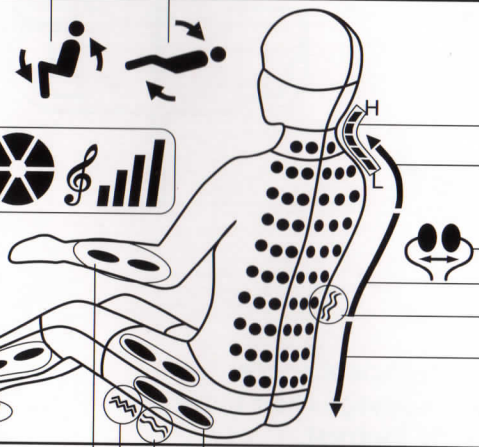

Shoulder Adjustment
Thoracic Massage

Width Adjustment
Cervical Massage
Back Heat Therapy
Lumbar Massage

Foot/Calf Heat Therapy
Foot/Calf Air Massage
Lower Body Traction Function
Arm Air Massage
(Montage Premier Only)

Hip Air Massage
Buttocks/Thigh Heat Therapy
Hip Vibration Massage

Massage Chair Set Up & Preparation

Unfolding/Folding the Massage Chair


The massage chair is packaged with the backrest in the down position.



- Be careful to fold backrest slowly.
- Be careful to not get your fingers or hands caught between the armrest and the backrest

Unfolding the Massage Chair


1. Raise the backrest to the upright position until the latch engages (you will hear a click).

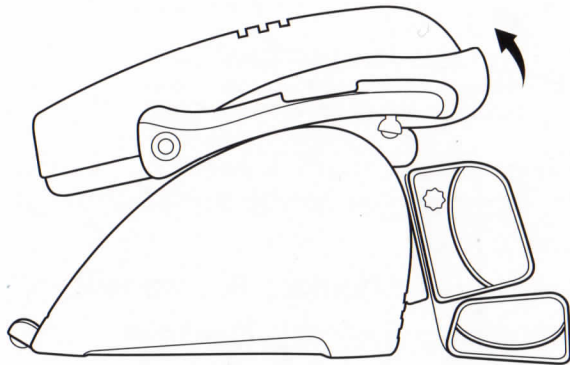

Folding the Massage Chair

1. Raise the backrest to the upright position until the latch engages (you will hear a click).
2. Pull the backrest lever up to release the backrest from the locked position.
3. Push the backrest down into the folded position.

Lever to fold backrest

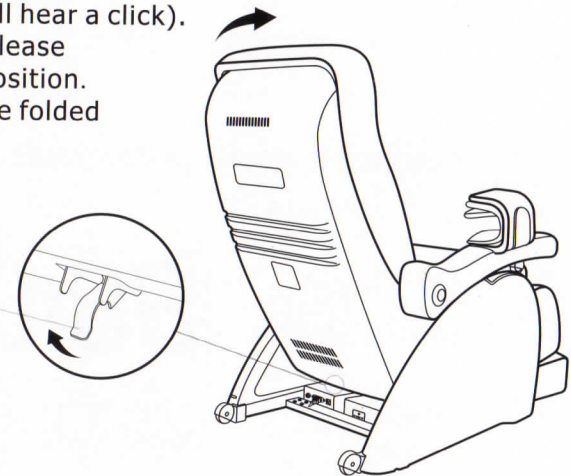

Placement of the Massage Chair

- Place the massage chair where you will have sufficient space.
- You need a minimum of 24 inches behind the massage chair to recline.
- You need a minimum of 24 inches to incline the footrest.



CAUTION




- Use caution when placing the massage chair on wood floors.
- You may want to place a carpet underneath your massage chair to prevent scratching/abrasions to your floors.
- Make sure nothing good is behind the massage chair to obstruct the reclining position.



Massage Chair Set Up & Preparation

Installation of the Remote Control Cradle

- The remote control cradle is installed on the left side of the massage chair base.
- Snap the cap to the end of the support bracket and secure the remote control support bracket with the 3 screws provided.
- Secure the remote control cradle to the top of the remote control support bracket with the screws provided.
- Installation of Remote Cradle: Insert the remote control from the top until it sits firmly in the holder.
- Removal of Remote Control: Hold the top of the remote control and slide it up and out of the holder.
- Adjustable Remote Cradle: Pivot remote cradle to the angle you desire or swivel it to the left or right in the desired position.

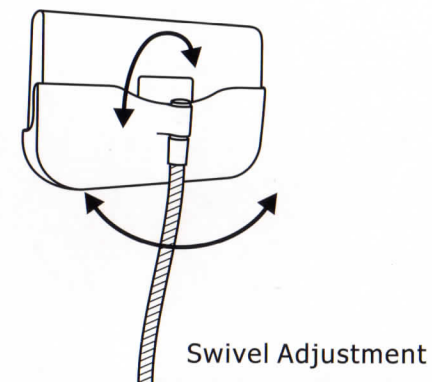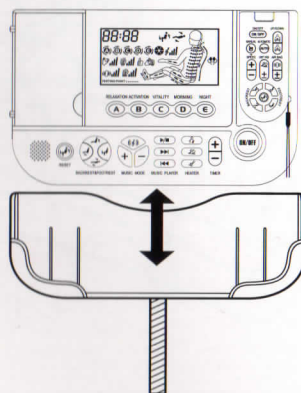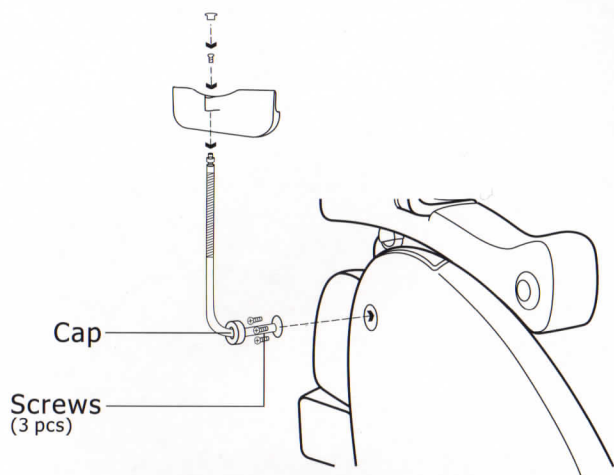




Massage Chair Set Up & Preparation

Arm Cuff Installation(Montage Premier Only)

1. Insert the air tubes of the arm cuff through the hole of the middle of the armrest for both sides.
2. Open the armrest and secure the arm cuff with the four (4) screws provided.
3. Connect the air hoses to the air coupling located inside the armrest.
4. Close the top of the armrest and lift the armrest and secure the armrest together with the two(2) screws behind the armrest guide.






Make sure to install the Arm Unit securely. Otherwise, it would cause air leakage or injury if the unit falls accidentally.

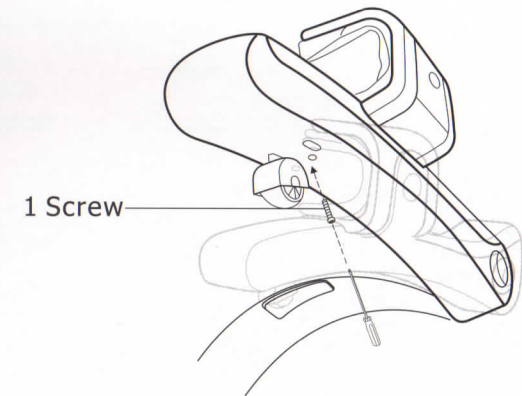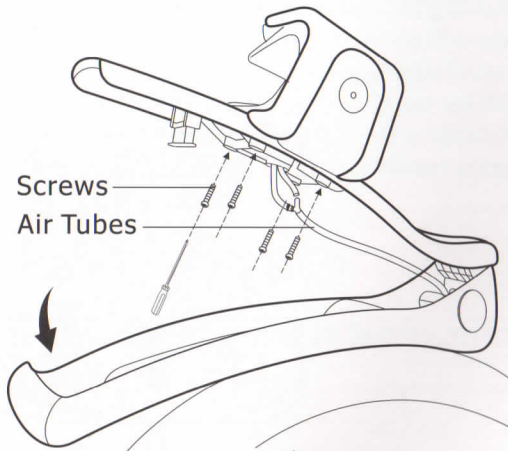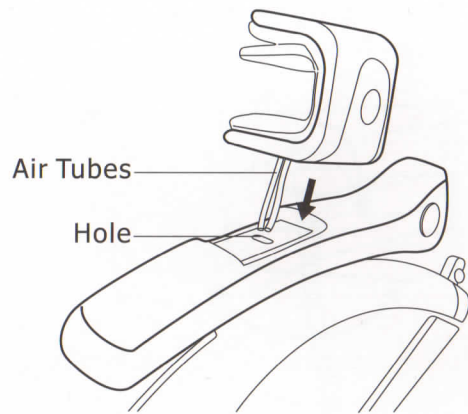

Seat Cushion Installation

1. The seat cushion needs to be connected to the massage chair for both the air and vibration massages.
2. Connect the air coupling to the air hose with the same color or number (Connect 3 to 3 or yellow to yellow).
3. Connect the electrical couplings with its corresponding color or number. To separate, press the hooks together and pull the plug out.
4. Attach the seat cushion by lining up the Velcro strips.

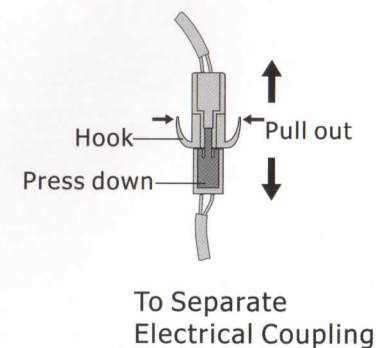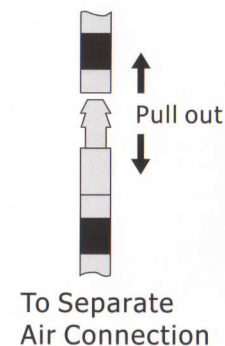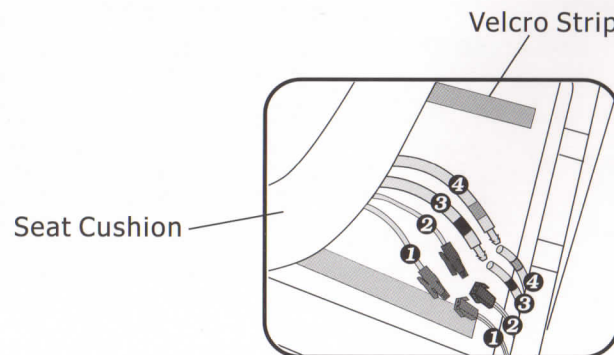

Massage Chair Set Up & Preparation

Backrest Pad Installation

The backrest pad is attached to the backrest with the zipper (View A).

A. Connect the back heating connectors Plug 1 to Plug 2.

B. One connector is located on the inside of the backrest pad and the other is located towards the top of the backrest.


Head Pillow Installation

1. Attach the headrest to the backrest pad by attaching it to the velcro strips. (View B)


2. Attach the head pillow to the headrest by attaching it to the velcro strips.

3. You can adjust the height of the head pillow by attaching it higher or lower to the velcro strips on the headrest.


View A

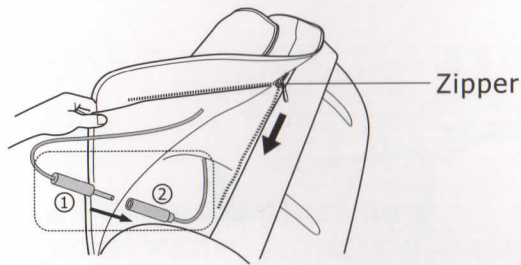

View B

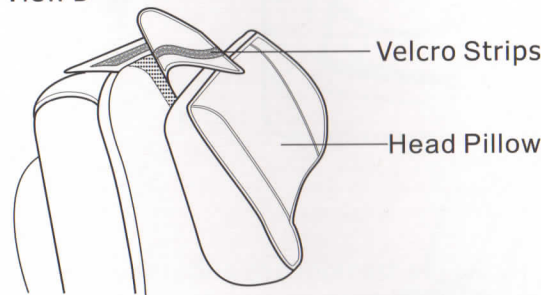

View C

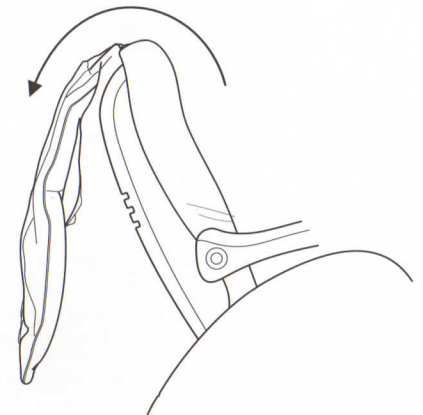

Adjusting the Intensity of the Back Massage


- You can adjust the intensity of the back massage by adding or removing pads. If the massage is too strong you can add additional pads, a towel or blanket. One sponge pad is provided for you to place it into the backrest pad to help absorb some of the roller stimulation. If the massage is not strong enough, then remove the pad. You can flip the backrest pad behind the massage chair (View C) for an intense massage.

- Please keep in mind, you should use your massage chair on a daily basis. However, please gauge your sensitivity to massages prior to using your massage chair without the backrest pad.



• Prolonged exposure to heat on the same spot for a long duration is not recommended.

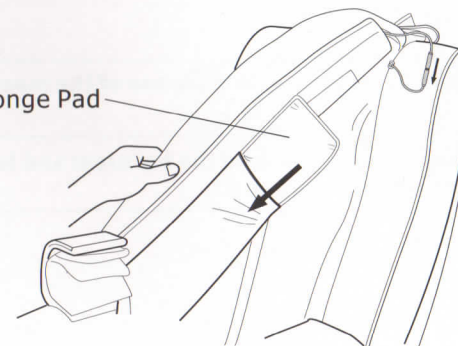


Sponge Pad





Massage Chair Set Up & Preparation



Using the Reclining Function

Backrest

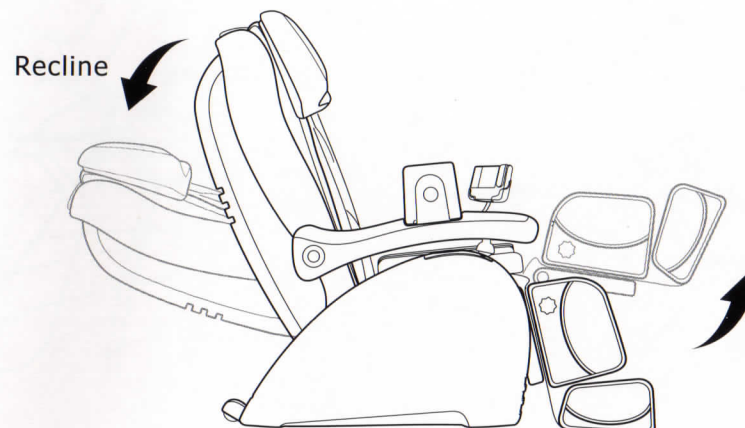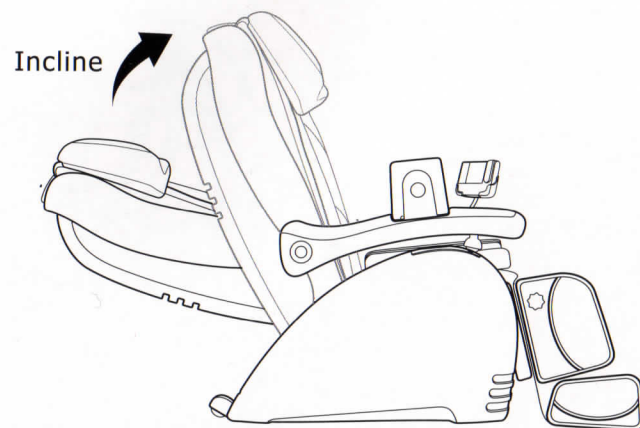- To Incline: Press and hold the Recline Up  button until the backrest is at the angle you desire.
- To Recline: Press and hold the Recline Down  button until the backrest is at the angle you desire.
(Note the Recline Down button also inclines the footrest simultaneously.)
- To Reset: Press the Reset  button, the backrest and the footrest will simultaneously return to their initial position.



Footrest

- To Incline: Press the Footrest Up  button until the footrest is raised to the desired height.
- To Recline: Press the Footrest Down  button until the footrest is lowered to the desired height.




• Keep hands and fingers away from moving areas of the massage chair to prevent injury.




• Always make sure that the areas around the backrest and footrest are clear before operating the massage chair.

Incline

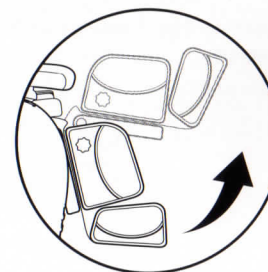

Recline

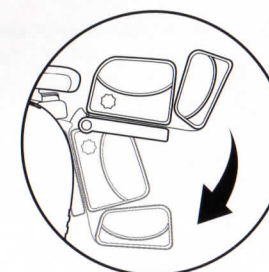


Massage Chair Set Up & Preparation

Footrest Length Adjustment

The length of the footrest can be adjusted for the comfort of each user by lifting the footrest adjustment lever.


- To Extend the Footrest: Lift the lever and push the footrest out with your feet. Once it is at the correct length, lock the lever in position.
- To Shorten the Footrest: Lift the lever and allow the footrest to slide back to the length you desire, then lock the lever.

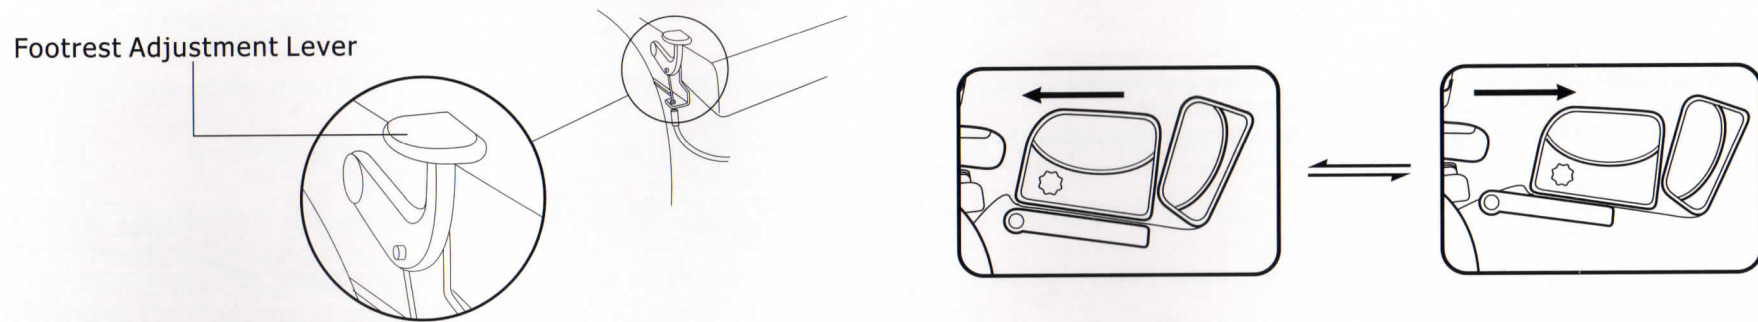

Front Footrest Adjustment

The angle of the front footrest can be adjusted for your comfort by rotating the footrest adjustment knob as shown below.

- To change the Angle: Rotate the footrest adjustment knob counterclockwise and adjust the angle with your feet and then release the footrest adjustment knob to lock the angle in place.
- Reset Upright: Rotate the footrest adjustment knob counterclockwise and the front footrest will reset upright.

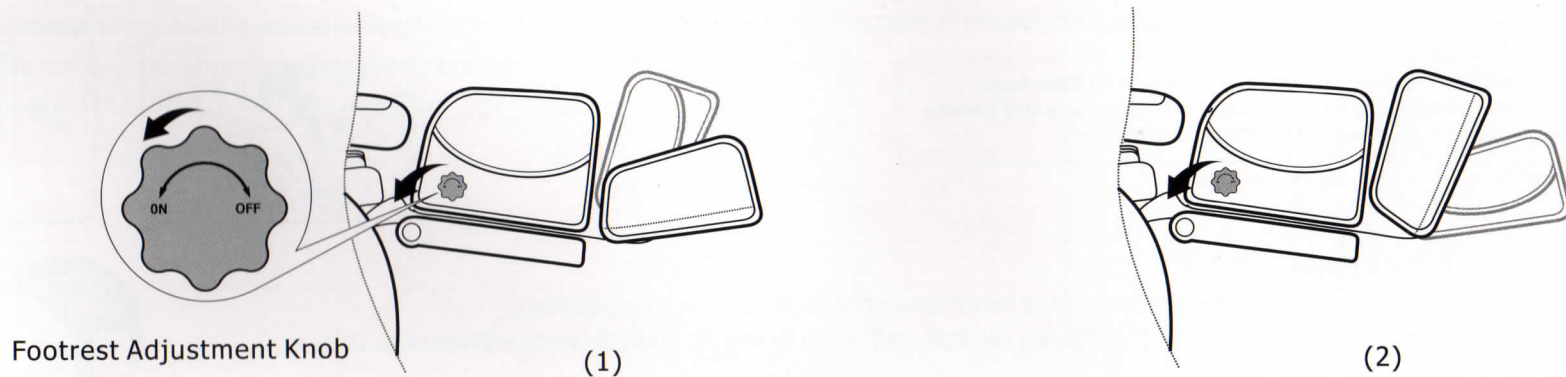


Massage Chair Set Up & Preparation

Moving the Massage Chair



Please follow these guidelines when moving your massage chair:

- Adjust the backrest to its fully upright position.
- Carry: If you carry the massage chair, a minimum of two people are required to lift the chair.
- Move: You can also move the massage chair using the wheels. Use a minimum two people to move the chair. One person needs to lift the footrest up while the other person pulls the backrest back until the weight of the massage chair is on the wheels. Push the chair to where you want to move it.





CAUTION

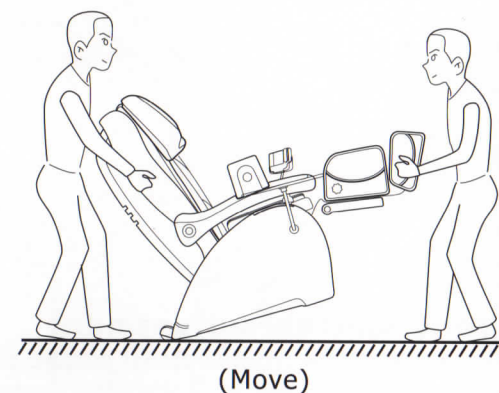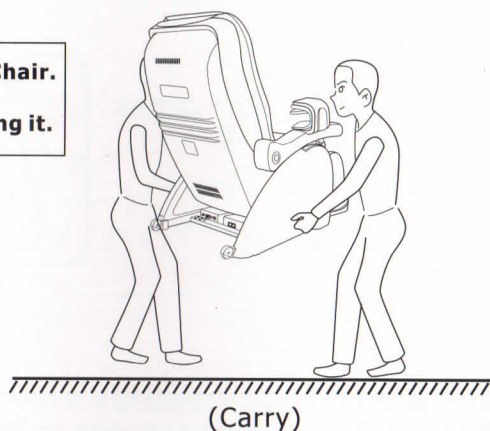- Please pull out AC Plug from Electric outlet before moving Chair.
- Do not move the chair when someone is sitting on it.
- The chair is rather heavy and take sufficient care when lifting it.





Turning On Your Massage Chair

1. Connect the AC Plug to the Electrical Outlet.
2. Turn on the Main Power Switch located underneath and behind the backrest.
3. Press the  button, to activate the massage chair. When you activate the massage chair, it will first scan the curvature of the upper body and detects your the exact acupoints to give you a truly customized massage.






CAUTION

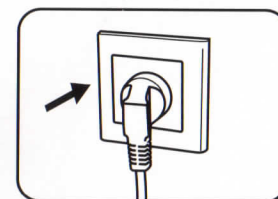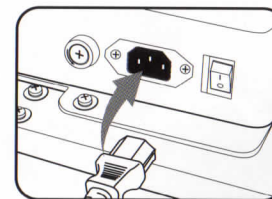- Make sure that the AC cord is not under the chair base.
- Always make sure that the main power switch is Off before connecting the AC plug to the Electrical Outlet.



Turning On Your Massage Chair

- Press the Reset  button to reset the backrest and footrest to their initial starting position.
- Press the  button to **OFF**, turn off the Main Power Switch and unplug the AC plug from the Electrical Outlet.

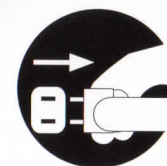

Massage Programs

Your Montage Elite/Premier comes with three (3) types of massage programs for your enjoyment:

- 1) Automatic Massage Programs: Five (5) Pre-programmed whole body massages.
- 2) Synchronized Massage with Music: Massage function will synchronize with the rhythm of the music being played.
- 3) Manual Massage Programs: Mix and match from a choice of massage functions in each part of the massage chair.

1. Using the Automatic Massage Programs

You can choose from five (5) pre-programmed whole body massages. Each program is specially designed to provide specific wellness goals with a single touch of the Remote Control.

Choose from one of the five (5) pre-programmed whole body massages:



A-- Relaxation mode **B**-- Activation mode **C**-- Vitality mode **D**-- Morning mode **E**-- Night mode







Choose the automatic massage on the Remote Control **(A)** **(B)** **(C)** **(D)** **(E)** Each letter corresponds with the icon **(A)** **(B)** **(C)** **(D)** **(E)** on the LCD


- To start the massage, press any of the automatic massage programs to enjoy a continuous massage of the whole body. Press the same button again to stop the massage at any time.

2. Using the Synchronized Massage with Music

You can synchronize the massage function with the rhythm of the music you are playing in the Mp3 player.

Music Synchronize  button with its corresponding LCD icon: 

1. Download your favorite music onto your music Universal Serial Bus (USB) music stick. You need to download music in the MP3 format only. Insert your USB music stick into the USB data port located underneath and behind the backrest.
2. Connect the headphones to the audio output. Press the  button to start the synchronized massage with music.
3. Press the Volume   buttons to adjust the volume higher or lower (4 levels).
4. Mp3 Player control buttons:  Start/Stop  Next  Previous

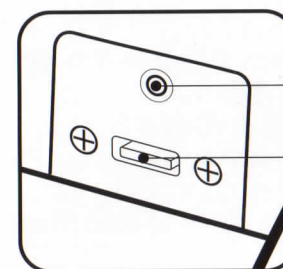

Audio Output for Headphones

USB Dataport

Massage Programs

3. Manual Massage Programs

You can choose from different therapies ranging from back massages, air massages, vibration massages, lower body traction program and heat therapy. You can also mix and match from a choice of therapies to find the perfect mix for you. You may also adjust the speed of the massage, air pressure, intensity and position for your comfort and relaxation.

A) 4 Back Massage Programs:

- Kneading Massage
- Tapping Massage
- Kneading & Tapping Massage
- Pressing Massage

B) 3 Air Massage Programs:

- Hip Air Massage
- Calf/Foot Air Massage
- Arm Air Massage (Montage Premier Only)

C) 1 Lower Body Traction Program:

- Traction Footrest













D) 1 Vibration Massage:

- Hip Vibration Massage

E) 3 Heat Therapy Functions













- Back Heat Therapy
- Buttock/Thigh Heat Therapy
- Foot/Calf Heat Therapy

Please use the chart below to help select the mix of Manual Programs Available

Massage Programs	LCD	Speed Adjustment	Level	Width	Parts	Up/down
Kneading		<input checked="" type="checkbox"/>			<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Tapping		<input checked="" type="checkbox"/>		<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Kneading & Tapping		<input checked="" type="checkbox"/>			<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Pressing				<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	
Hip Vibration Massage			<input checked="" type="checkbox"/>			
Arm Air Massage			<input checked="" type="checkbox"/>			
Hip Air Massage			<input checked="" type="checkbox"/>			
Calf/Foot Air Massage			<input checked="" type="checkbox"/>			
Calf/Foot Traction Massage			<input checked="" type="checkbox"/>			
Back Heat Therapy						
Buttock/Thigh Heat Therapy						
Foot/Calf Heat Therapy						

A) Back Massage Programs














1. Kneading Massage

- Press the Kneading  button to begin the kneading massage which then corresponds to the  icon on the LCD.
- Press either Massage Selection     button to select which area of the back or whole back you would like massaged.
- Press the massage Roller Up  button or the massage Roller Down button  continuously to move the massage rollers to the desired position and then release the Up/Down Massage Roller button to pinpoint the massage.
- To adjust the speed of the massage, press the Plus/Minus   button to increase/decrease the speed which then corresponds to the  icon on the LCD.
- Press the Kneading  button again to stop the massage at any time.














Message Programs

A) Back Massage Programs (continued)











2. Tapping Massage


- Press the Tapping  button to begin the tapping massage which corresponds to the Tapping  icon on the LCD.
- Press either Message Selection     button to select which area of the back or whole back you would like massaged. Adjust the roller width with the Roller Width  button.
- Press the Message Roller Up  button or the Message Roller Down  button continuously to move the message rollers to the desired position and then release the Up/Down Message Roller button to pinpoint the message.
- To adjust the speed of the massage, press the Plus/Minus   button to increase/decrease the speed which corresponds to the Tapping Speed  the LCD.
- Press the Tapping  button again to stop the massage at any time.

3. Kneading & Tapping Massage

- Press the Kneading & Tapping  button to begin the dual action massage which corresponds to the Kneading & Tapping  icon on the LCD.
- Press either Message Selection     button to select which area of the back or whole back you would like massaged.
- Press the Message Roller Up  button or the Message Roller Down  button continuously to move the message rollers to the desired position and then release the Up/Down message roller button to pinpoint the message.
- To adjust the speed of the massage, press the Plus/Minus   button to increase/decrease the speed which corresponds to the Kneading & Tapping Speed   icon on the LCD.
- Press the Kneading & Tapping  button again to stop the massage at any time.

4. Pressing Massage



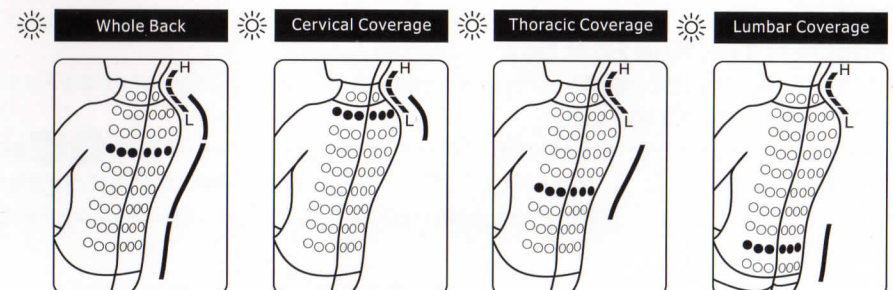


- Press the Pressing  button to begin the dual action massage which corresponds to the Pressing  icon on the LCD.
- Press either Message Selection     button to select which area of the back or whole back you would like massaged. Adjust the roller width with the Roller Width  button.
- Press the Message Roller Up  button or the Message Roller Down  button continuously to move the message rollers to the desired position and then release the Up/Down message roller button to pinpoint the message.
- Press the Pressing  button again to stop the massage at any time.



The following illustration provides a quick reference for the options to massage a certain area on the entire back.







Massage Programs

B) Hip Vibration Massage







- Press the Hip Vibration  button to begin the hip vibration massage for the buttocks and thighs which then corresponds to the Hip Vibration Massage  icon on the LCD.
- To adjust the speed of the massage, press the Plus/Minus  button to increase/decrease the speed which corresponds to the Vibration Speed icon  on the LCD.
- Press the Hip Vibration Massage  button again to stop the massage at any time.

C) Air Massage Programs







Air Massage for Arms (Montage Premier Only)

- Press the Arm Massage  button to begin the Air Massage for your arms which then corresponds to the Air Pressure  icon on the LCD.
- To adjust the air pressure of the massage, press the Plus  button or the Minus  button to increase/decrease the air pressure which then corresponds to the Air Pressure Level  icon on the LCD. There are 4 levels of air pressure that can be selected.
- Press the Arm Massage  button again to stop the massage at any time.

Air Massage for Hips






- Press the Hip Massage  button to begin the Air Massage for your buttocks and thighs which corresponds to the Air Pressure  icon on the LCD.
- To adjust the air pressure of the massage, press the Plus  button or the Minus  button to increase/decrease the air pressure which then corresponds to the Air Pressure Level  icon on the LCD. There are 4 levels of air pressure that can be selected.
- Press the Hip Massage  button again to stop the massage at any time.

Air Massage for Calves/Feet

- Press the Calf/Foot Massage  button to begin the Air Massage for your calves and feet which then corresponds to the Air Pressure  icon on the LCD.
- To adjust the air pressure of the massage, press the Plus  button or the Minus  button to increase/decrease the air pressure which then corresponds to the Air Pressure Level  icon on the LCD. There are 4 levels of air pressure that can be selected.
- Press the Calf/Foot Massage  button again to stop the massage at any time.

D) Lower Body Traction Program



Footrest Traction Function

- Press the Traction  button to begin the Lower Body Traction Function to stretch and extend your lower extremities which then corresponds to the  icon on the LCD
- To adjust the strength of the stretch, press the Plus/Minus  button to increase/decrease the strength which then corresponds to the Air Pressure Level  icon on the LCD. There are 4 levels of strength of the stretch that can be selected.
- Press the Traction  button again to stop the massage at any time.



Massage Programs

E)Heat Therapy



Back Heat Therapy

- Press the Back Heat  button to begin the back heat therapy which then corresponds to the icon on the LCD.
- Press the Back Heat  button again to stop the heat therapy at any time.



Buttocks/Thigh Heat Therapy

- Press the Buttocks/Thigh Heat  button to begin the buttocks and thigh heat therapy which then correspond to the icon on the LCD.
- Press the Buttocks/Thigh Heat  button again to stop the heat therapy at any time.




Foot/Calf Heat Therapy

- Press the Foot/Calf Heat  button to begin the foot and calf heat therapy which then corresponds to the icon on the LCD
- Press the Foot/Calf Heat  button again to stop the heat therapy at any time.

Adjust the Shoulder Position

1. Press the Auto Shoulder  button to start the infrared scan of the curvature of your body which detects your unique acu-points. The infrared scan will also detect your shoulder position and will automatically adjust the massage rollers to your shoulder  height.
2. Press the Shoulder Up button to manually adjust the position of your shoulder. There are five (5) positions available for the shoulder area.

Timer

1. To adjust the massage time, press the Timer Plus/Minus  button which then corresponds to the **88:88** icon on the LCD.
2. The default massage time is thirty (30) minutes and the massage program will stop automatically after thirty (30) minutes has elapsed.
3. Adjusting the time with the Timer plus/minus button: You can adjust the time in five (5) minute increments.
 - a. Press the Timer Plus  button to increase the time by five (5) minutes.
 - b. Press the Timer Minus  button to decrease the time by five (5) minutes
4. After setting the time, the timer will begin to count down and the massage program will stop automatically when the time has elapsed. If you switch programs or change from automatic to manual, the Time remaining will not change.

Care and Storage of your Massage

Storage of your Massage

- If you are not going to use your massage chair for an extended period of time, then turn off the main power and disconnect the plug from the electrical outlet.
- Keep your massage chair clean by periodically wiping off any dust or dirt to ensure long term performance of your massage chair.
- Keep your massage chair away from places with high humidity.
- To protect your massage chair, cover the massage chair with a dustproof cover to keep dust and dirt from building up.
- Keep the ventilation holes clear of dust and debris.



• Always keep your massage chair away from direct sunlight or heating appliances like space heaters, etc.

Cleaning of Remote Controller

- Periodically clean your remote control with a dry cloth. Never use a wet cloth because it can cause a short in the electronics.

Cleaning of the PVC Leather Chair

- Periodically clean the PVC leather of the massage chair. You can use vinegar and water mixture or you can use a window cleaning solution. Dip a clean white cotton towel into the cleaning solution. Wipe the areas of the PVC leather you want to clean.
- When using a cleaning solution, please exercise common sense. First start by cleaning on inconspicuous area on the massage chair before liberally applying the solution on your upholstery.



• Never use any acidic cleaning solutions, diluents, volatile oil or bleaching powder. These products may cause discolorations or cracks.
• Never use an iron on the PVC leather.

Specifications

Name: Montage Massage Chair

Model: [] Montage Elite [] Montage Premier

Rated Voltage: [] AC 100-120V [] AC 220-240V

Rated Frequency: 50/60Hz

Power Consumption: 260W

Rated Working Time: 30 minutes

Net Weight: 188 lbs (85kg)

Note: Specifications are subject to change without notice.

Troubleshooting your Massage Chair

If you encounter any problems with the operation of your massage chair, please check the following troubleshooting guide for some common issues to see if they can be resolved. If the massage chair still does not work or malfunctions, please switch off the main power and remove the AC plug from the electrical outlet and contact our service center.

Do not disassemble or attempt to repair the massage chair by yourself.

Conditions	Possible Cause or Action
Loud sound during Kneading, Tapping or Pressing Massage	Normal movement of the massage rollers
Knocking sound when changing massage functions	Mechanical sound when massage rollers switch to new massage function
Air sound starting and stopping	Normal operation of the air pump activating and deactivating
The massage chair does not respond when using the remote controller	Check the AC plug is firmly connected to Electrical Outlet
	Check that the main power is switched to ON position
	Check that remote controller is plugged into massage chair
Massage chair ceases operation during massage program	Massage chair may cease operation if it is being run continuously for a long period of time. Turn off and let cool
	The time on the timer has fully elapsed
The music is not working	Volume may be too low. Increase volume
	Check to make sure headphone jack is connected to audio output
	Check that music was downloaded correctly to the USB music stick and the proper format (MP3) was used
	Press the music play button
Massage does not synchronize with music	Make sure that you have activated the Music Synchronization Button

ALL RIGHTS RESERVED, ANY ALTERMENT PLEASE REFER TO THE REAL PRODUCT.



Omega Massage

TEL:800-659-3650

www.omegamassage.com